

BMW




F750GS/F800GS ADV/F850GS/F850GS ADV/F900R/F900XR S1000XR/R1200GS/R1200GS ADV/R1250GS/R1250GS ADV

M O U N T I N G I N S T R U C T I O N S

REF 3763

ORIGINAL EXTENSION HANDGUARDS

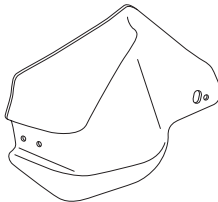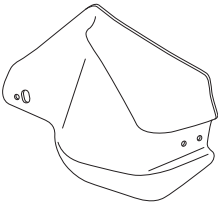

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Extensión paramanos original derecho	Right original extension handguard	1	3763W/H/N/FM3
2		Extensión paramanos original izquierdo	Left original extension handguard	1	3763W/H/N/FM3
3		Soporte metálico derecho	Right metal support	1	SOPOR2P2-R-8547
4		Soporte metálico izquierdo	Left metal support	1	SOPOR2P2-L-8547
5		Tornillo Allen M5x16 Ø11 ISO7380	M5x16 Ø11 ISO7380 Allen screw	2	TORNI-I7380-493
6		Tornillo Allen M5x11 Ø11 ISO7380	M5x11 Ø11 ISO7380 Allen screw	4	TORNI-AI----520
7		Arandela de nylon M5x1	M5x1 nylon washer	10	ARNV0000000245
8		Tapón tornillo M5 ISO 7380	M5 ISO7380 screw cap	6	TAPON-----85


BMW

F750GS/F800GS ADV/F850GS/F850GS ADV/F900R/F900XR S1000XR/R1200GS/R1200GS ADV/R1250GS/R1250GS ADV

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

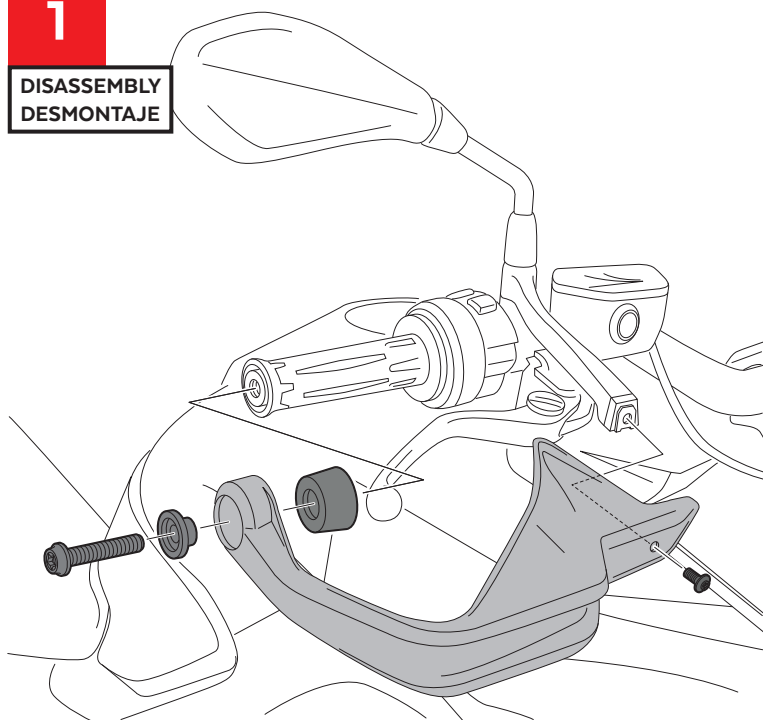


2

ASSEMBLY
MONTAJE

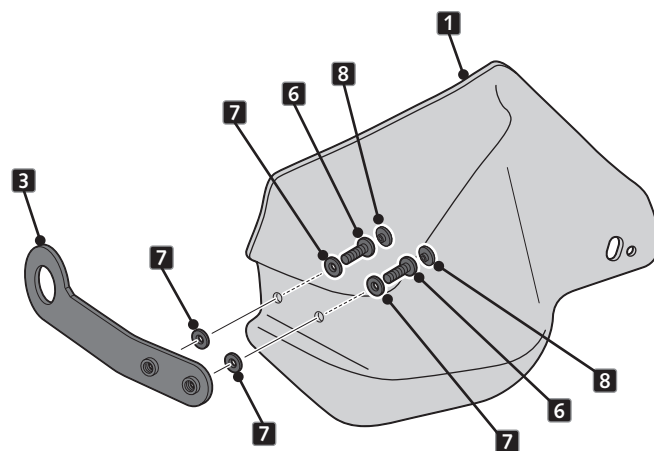

3


ASSEMBLY
MONTAJE

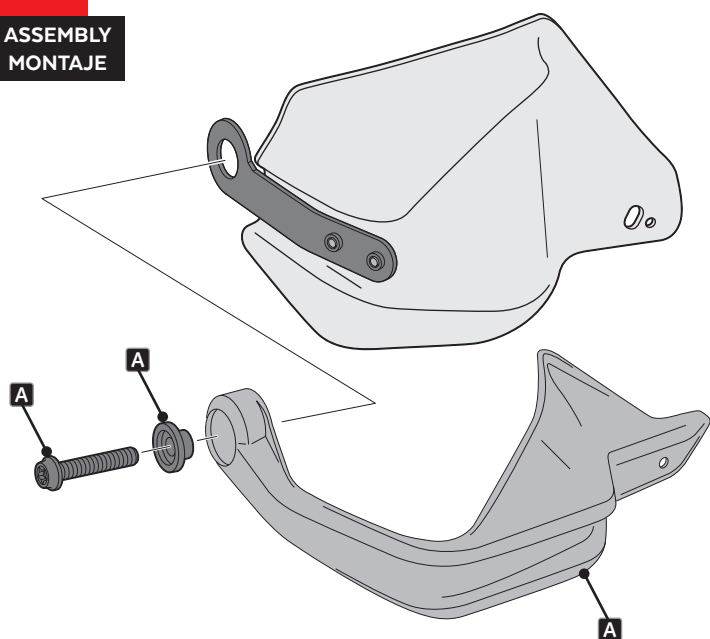

A PIEZA ORIGINAL
ORIGINAL PART

4

ASSEMBLY
MONTAJE

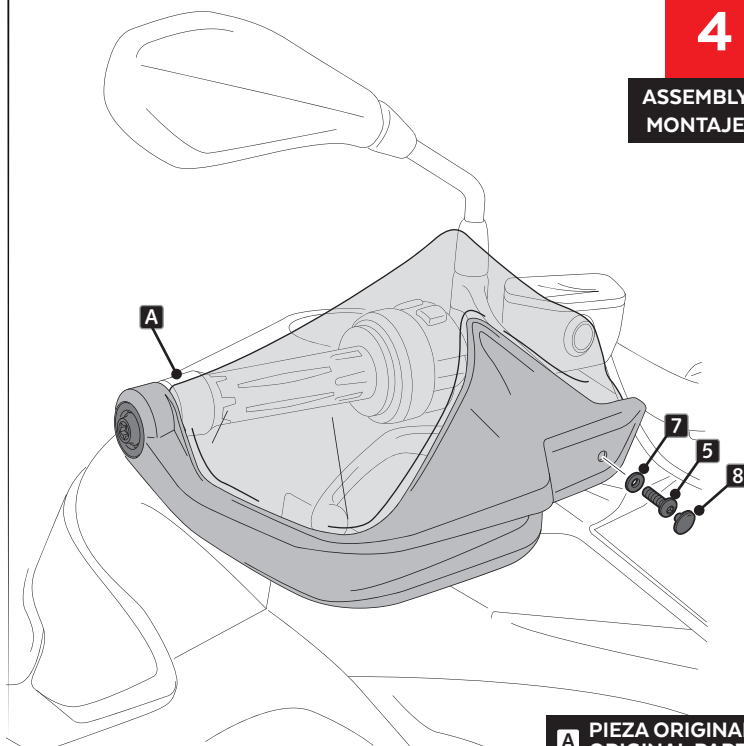

A PIEZA ORIGINAL
ORIGINAL PART


BMW

F750GS/F800GS ADV/F850GS/F850GS ADV/F900R/F900XR S1000XR/R1200GS/R1200GS ADV/R1250GS/R1250GS ADV

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

DISASSEMBLY
DESMONTAJE

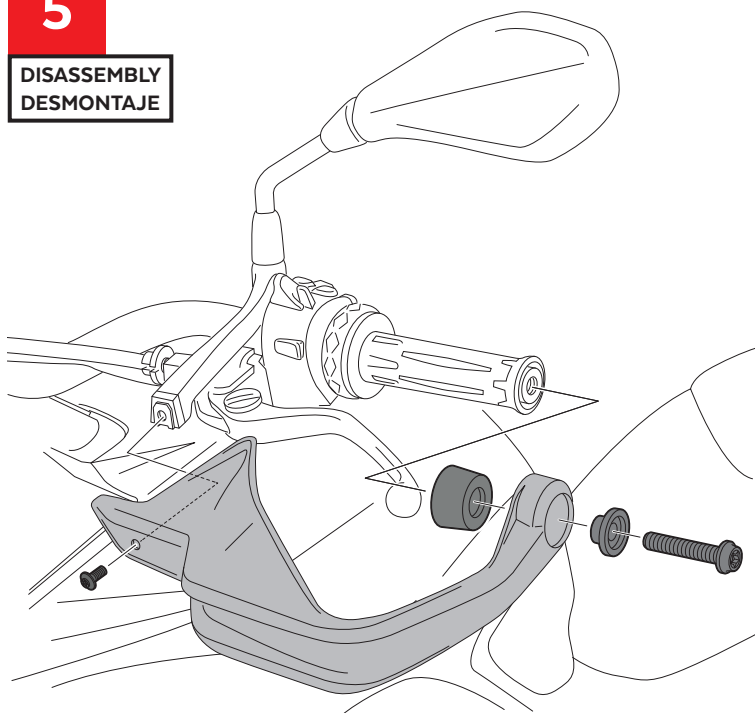


6

ASSEMBLY
MONTAJE

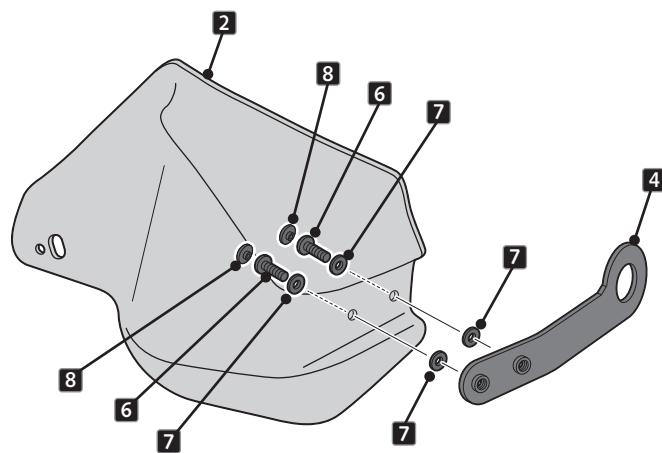

7


ASSEMBLY
MONTAJE

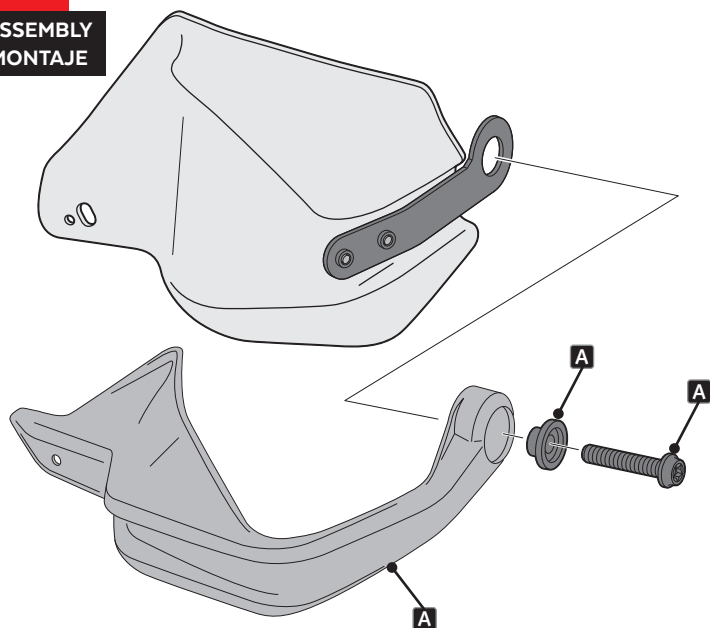

A PIEZA ORIGINAL
ORIGINAL PART

8

ASSEMBLY
MONTAJE

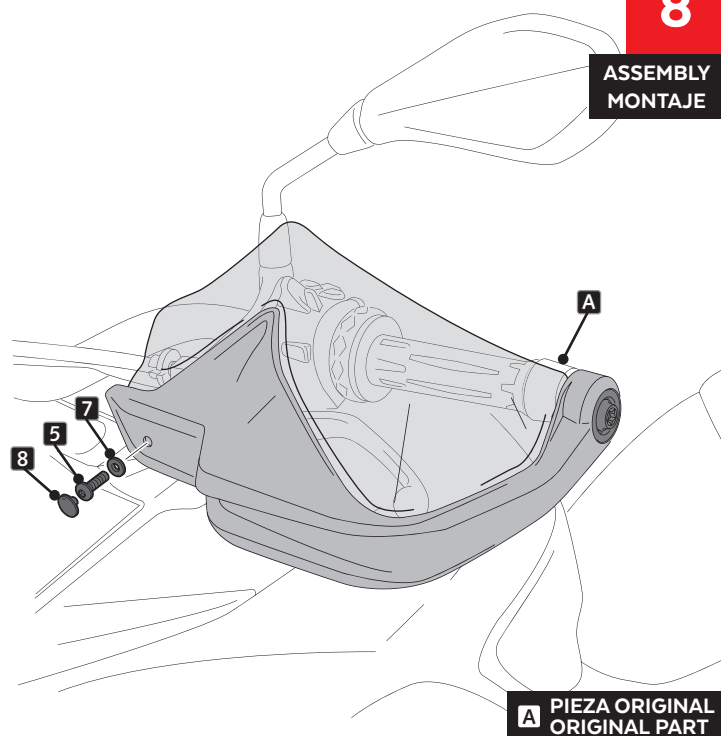

A PIEZA ORIGINAL
ORIGINAL PART