

HONDA CBR1000RR FIREBLADE / SP'20-

M O U N T I N G I N S T R U C T I O N S

REF 20488

REAR MUDGUARD



1 Person



20 min



EASY




FLAT
SCREWDRIVER



ALLEN

Nº 3
Nº 5

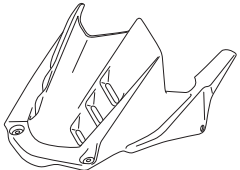


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Guardabarros	Mudguard	1	20488J/CM3
2		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-730
3		Tapón tornillo M5	M5 screw cap	2	TAPON-----85
4		Silentblock Ø18x Ø9 xØ11 x8	Ø18x Ø9 xØ11 x8 silentblock	3	SILENBGONE--064
5		Casquillo con valona Ø15 xØ9 x7,5	Ø15 xØ9 x7,5 bush with flange	3	CASQUI-1A---324
6		Tornillo Allen M6x16 Ø14 ISO 7380	M6x16 Ø14 ISO 7380 Allen screw	1	TORNI-I7380-403
7		Tapón tornillo M6	M6 screw cap	1	TAPON-----86

HONDA CBR1000RR FIREBLADE / SP'20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

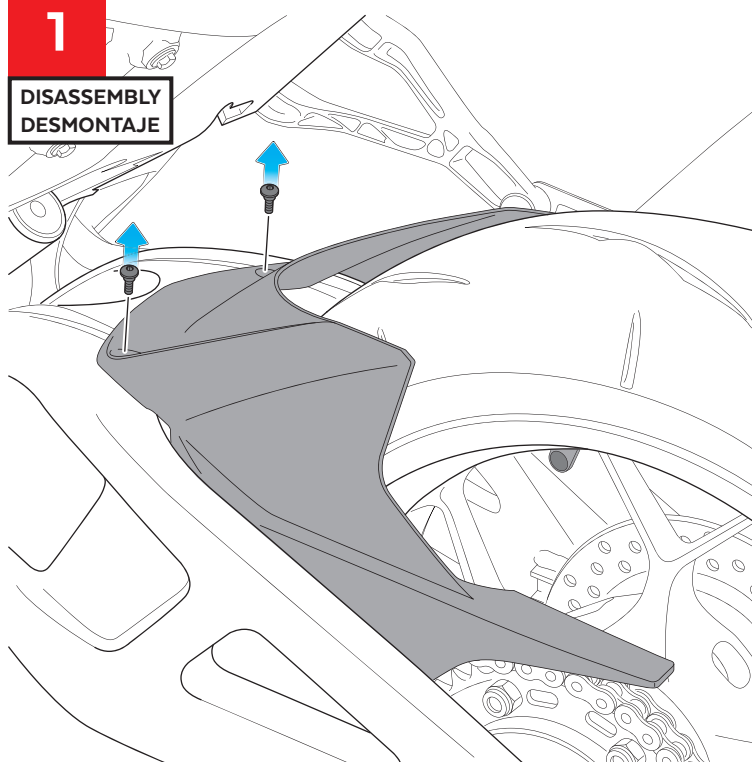


2

DISASSEMBLY
DESMONTAJE

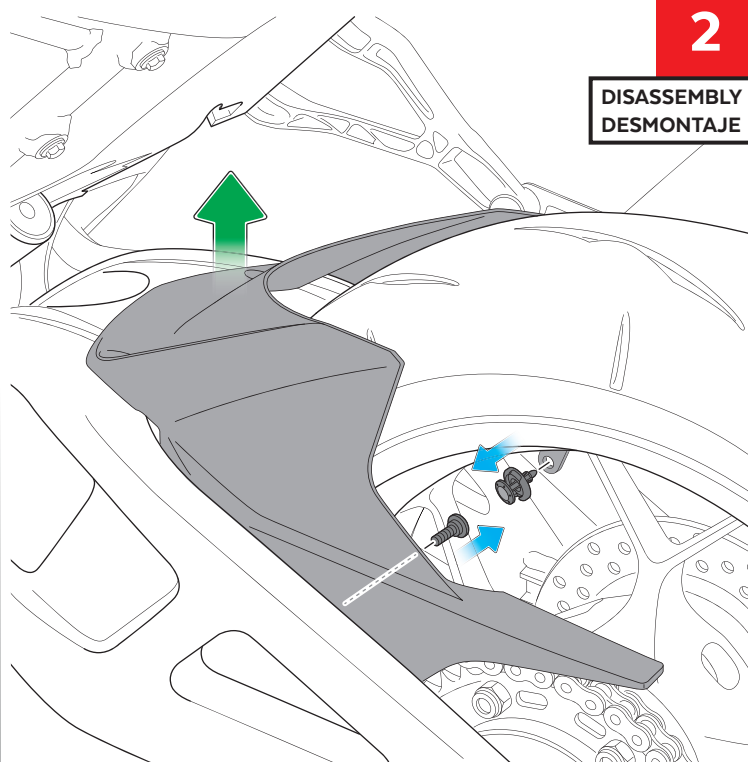


3

ASSEMBLY
MONTAJE

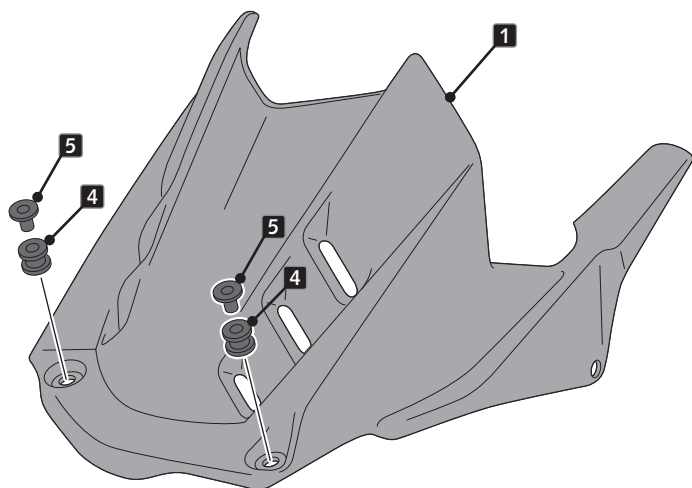

4

ASSEMBLY
MONTAJE

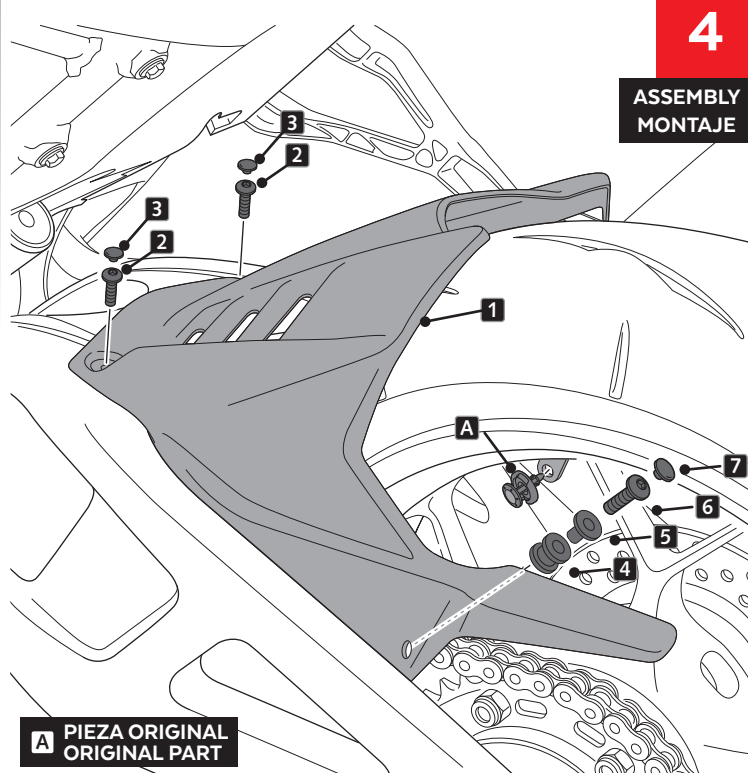

A PIEZA ORIGINAL
ORIGINAL PART