

BMW F900XR/R '20-

M O U N T I N G I N S T R U C T I O N S

REF 20544

GUARDABARROS TRASERO / REAR MUDGUARD

1 Person

20 min

EASY



ALLEN
Nº 3
Nº 4

TORX
T30

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Guardabarros	Mudguard	1	20544J/CM3
2		Soporte	Support	1	SOPORIP2--544
3		Tuerca enjaulada de aluminio M6 (Se suministra montada)	Lock nut M6 (Supplied mounted)	2	TUERCAJFM6--319
4		Tornillo Allen M6x20 Ø14 ISO7380	M6x20 Ø14 ISO7380 Allen screw	2	TORNI-I7380-404
5		Tornillo Allen M6x16 Ø14 ISO7380	M6x16 Ø14 ISO7380 Allen screw	3	TORNI-I7380-403
6		Tornillo especial M6x14 Long Hexagonal 13 (Rosca int M5x10)	M6x14 special screw Hexagonal lenght 13 (Rosca int M5x10)	1	TORNI-EM6---772
7		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	1	TORNI-I7380-493
8		Arandela de nylon M6	M6 Nylon Washer	1	ARANDEPNVCN0246
9		Tapón tornillo M5	M5 screw cap	1	TAPON-----85
10		Tapón tornillo M6	M6 screw cap	4	TAPON-----86
11		Silentblock Ø18x Ø9 xØ11 x8	Ø18x Ø9 xØ11 x8 silentblock	5	SILENBGONE--064
12		Casquillo con valona Ø15 xØ9 x7,5	Ø15 xØ9 x7,5 bush with flange	5	CASQUI-1A---324
13		Espuma adhesiva protectora 10x15mm (Se suministra montado en ID2)	Protect adhesive foam 10x15mm (Supplied mounted on ID2)	2	ESPUMA-----264


BMW F900XR/R'20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DISASSEMBLY
DESMONTAJE


A Tornillería original
Original screws

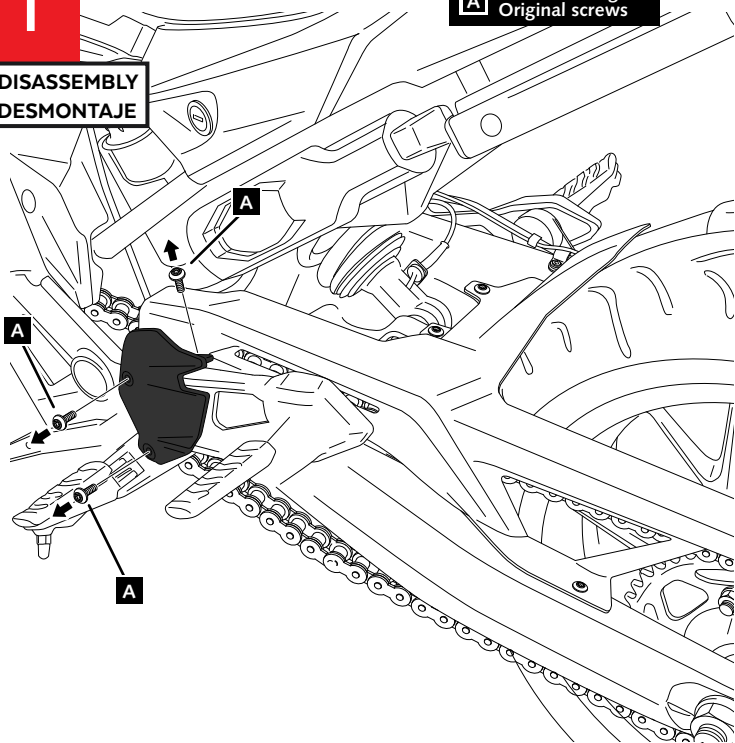

2

DISASSEMBLY
DESMONTAJE


A Tornillería original
Original screws

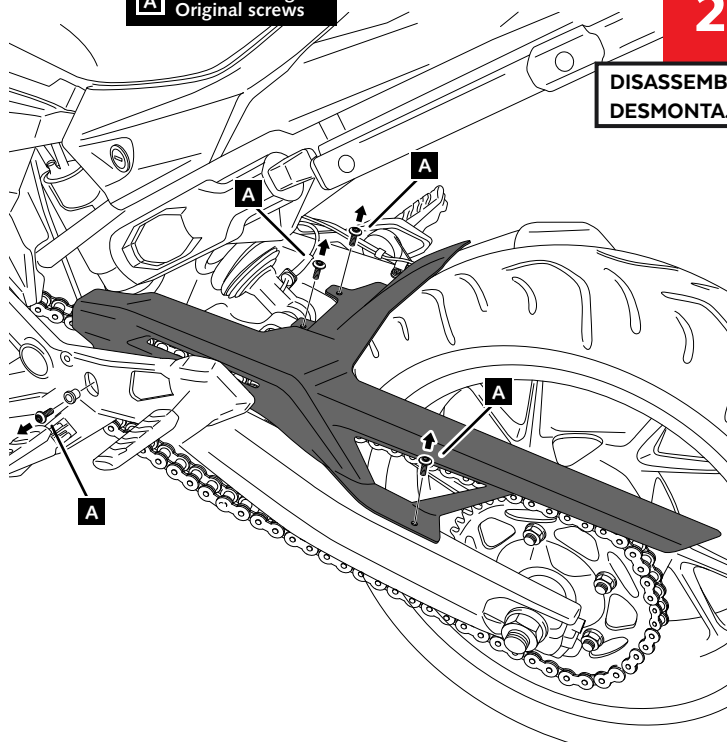

3

DISASSEMBLY
DESMONTAJE


A Tornillería original
Original screws

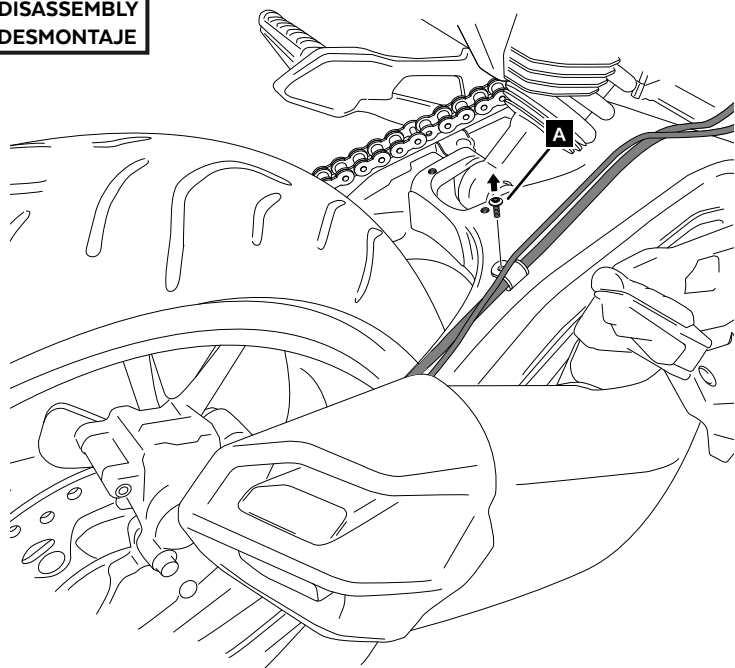

4

ASSEMBLY
MONTAJE

A Tornillería original
Original screws

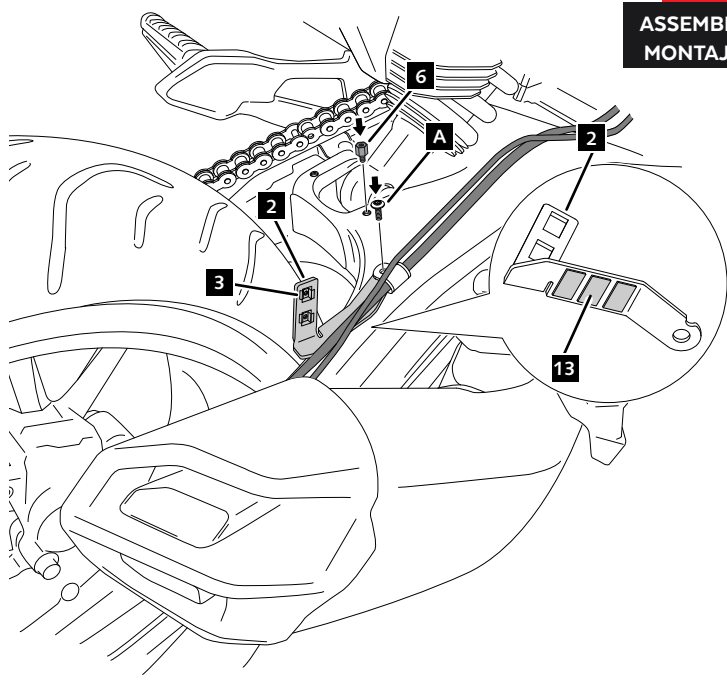


BMW F900XR/R'20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

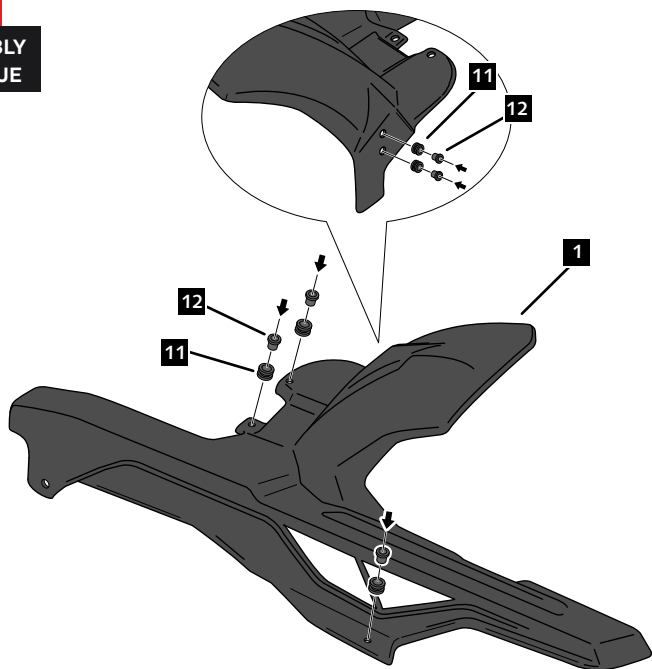


6

ASSEMBLY
MONTAJE

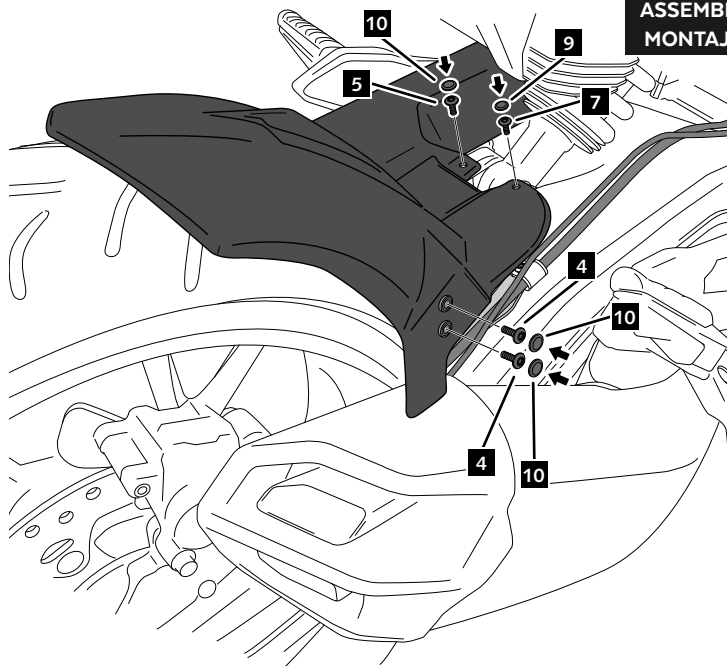

7

ASSEMBLY
MONTAJE

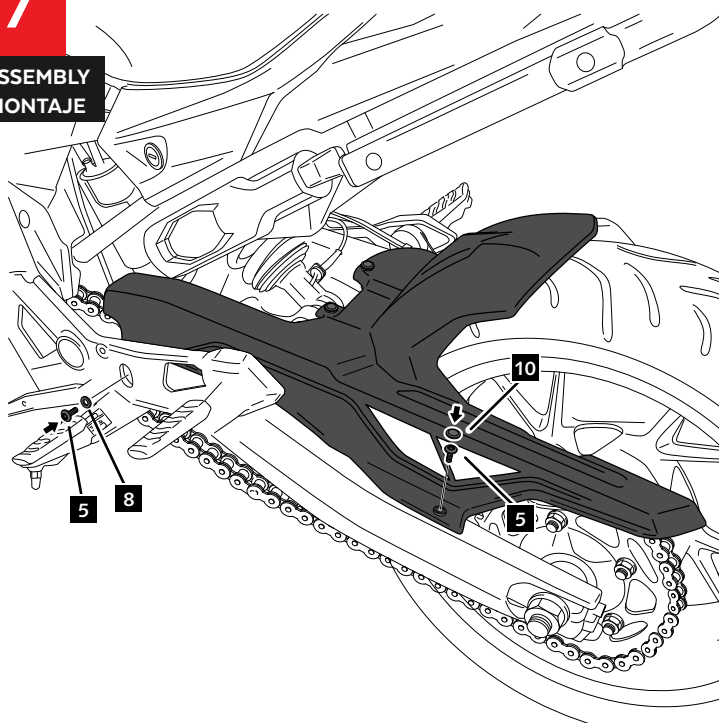

8

ASSEMBLY
MONTAJE

