

HARLEY DAVIDSON 1250 PAN AMERICA '21-

M O U N T I N G I N S T R U C T I O N S

REF 20842

REAR MUDGUARD



1 Person



30 min



EASY



ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Guardabarros	Mudguard	1	20842J/CM3
2		Soporte Cubrecadenas	Chain guard support	1	SOPOR-1P9-20842
3		Casquillo con valona M5	M5 bush with flange	2	CASQUI-----517
4		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 allen screw	2	TORNI-AI----520
5		Silentblock Ø18xØ9xØ11x8	Ø18xØ9xØ11x8 silentblock	6	SILENBGONE--064
6		Casquillo con valona Ø15xØ9x7,5	Ø15 xØ9 x7,5 bush with flange	4	CASQUI-1A---324
7		Tornillo especial M6x14 Longitud Hexagonal 27mm (Rosca int M5x15)	M6x14 special screw hexagonal lenght 27 (Int.Thread M5x15)	1	TORNI-E-----763
8		Tornillo allen M5x25 ISO 7380 Ø11	M5x25 Ø11 ISO 7380 allen screw	2	TORNI-I7380-766
9		Casquillo Ø8,5 xØ13 x6	Ø8,5 xØ13 x6 arrowhead	1	CASQUI-----208
10		Casquillo Ø8 xØ13 x7,5	Ø8 xØ14 x7.5 arrowhead	1	CASQUI8147-0193
11		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-493
12		Arandela de nylon M5	M5 nylon washer	2	ARNV00000000245
13		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	6	TAPON-----85


HARLEY DAVIDSON 1250 PAN AMERICA '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

**DISASSEMBLY
DESMONTAJE**

LEFT SIDE

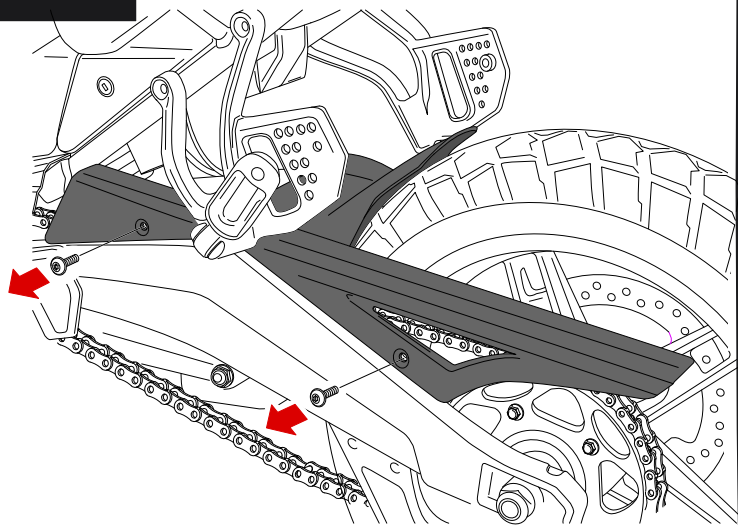


2

**DISASSEMBLY
DESMONTAJE**

RIGHT SIDE


PARA FACILITAR EL MONTAJE DEL GUARDABARROS, SE RECOMIENDA DESMONTAR EL TUBO DE ESCAPE.
TO FACILITATE THE ASSEMBLY OF THE MUDGUARD, IT IS RECOMMENDED TO REMOVE THE EXHAUST PIPE

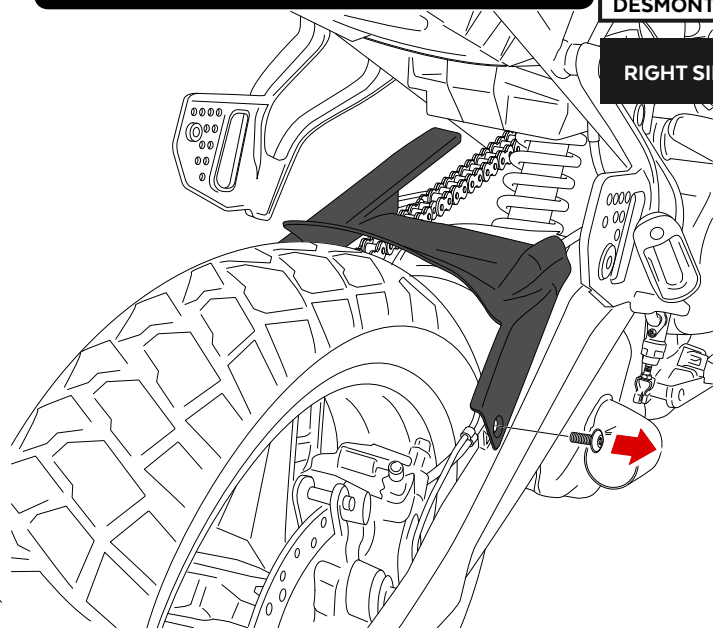

3


**DISASSEMBLY
DESMONTAJE**

RIGHT SIDE

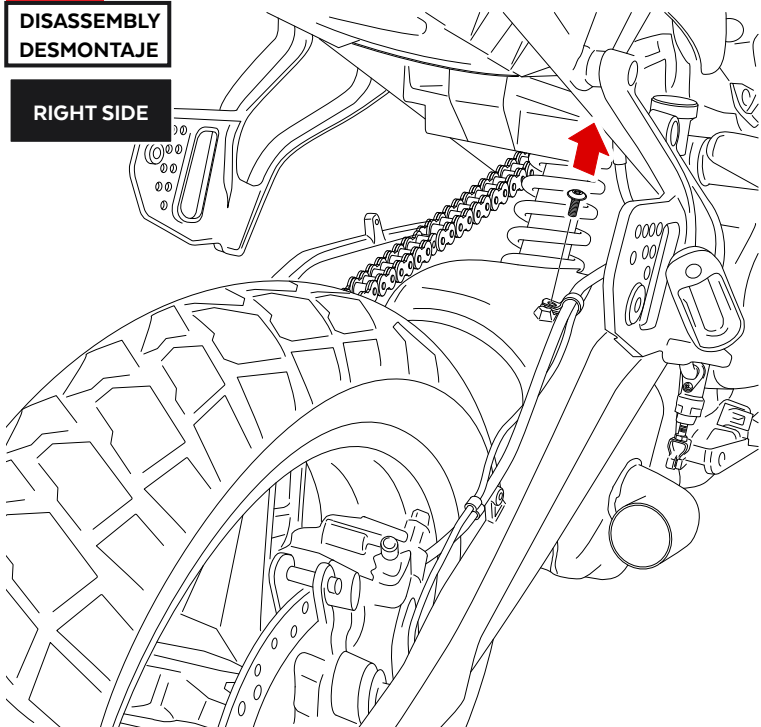

4

**ASSEMBLY
MONTAJE**

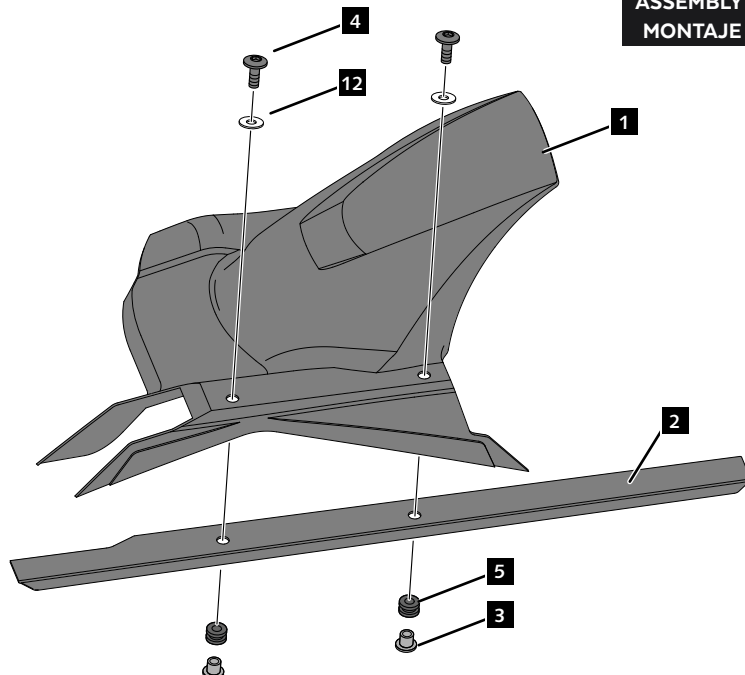


HARLEY DAVIDSON 1250 PAN AMERICA '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE


LEFT SIDE

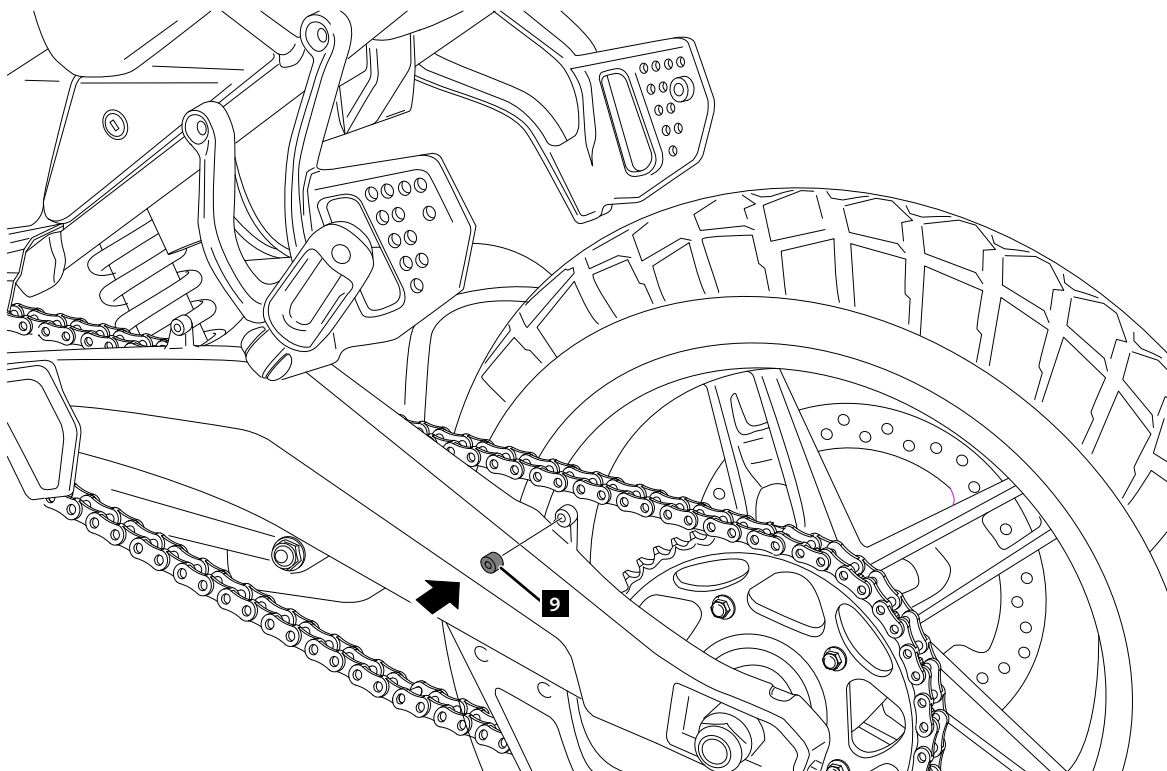

6

ASSEMBLY
MONTAJE

RIGHT SIDE

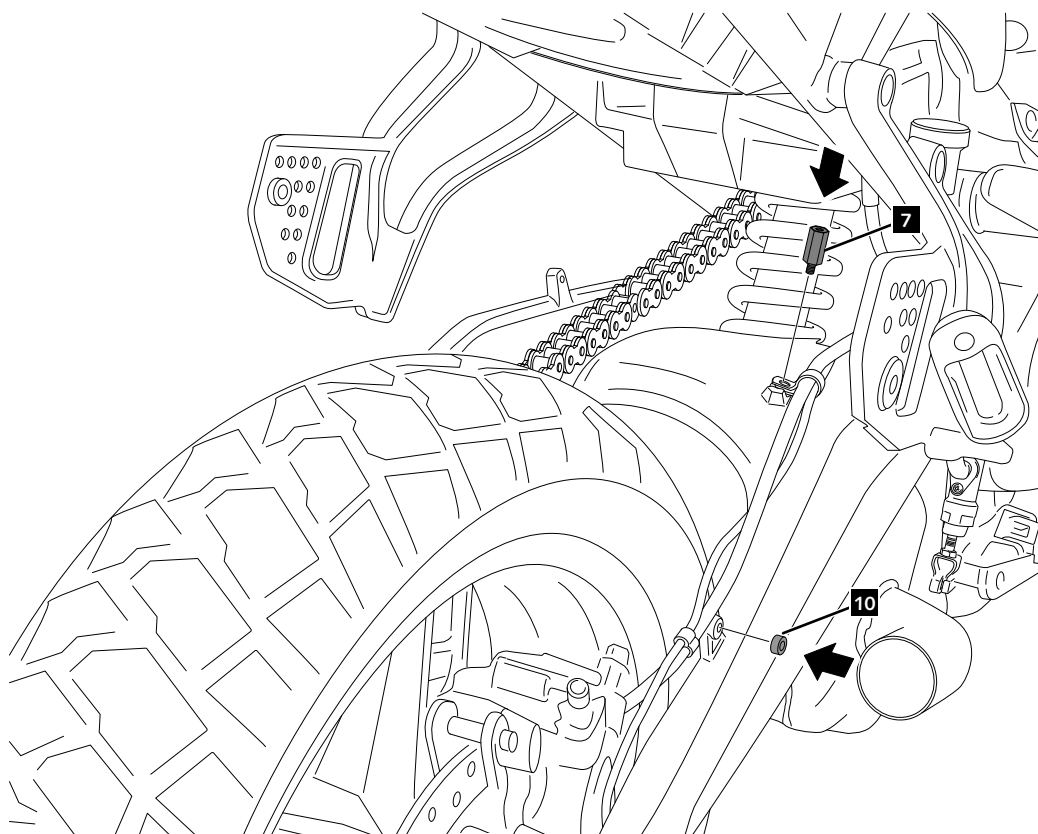


HARLEY DAVIDSON 1250 PAN AMERICA '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

7

ASSEMBLY
MONTAJE

LEFT SIDE

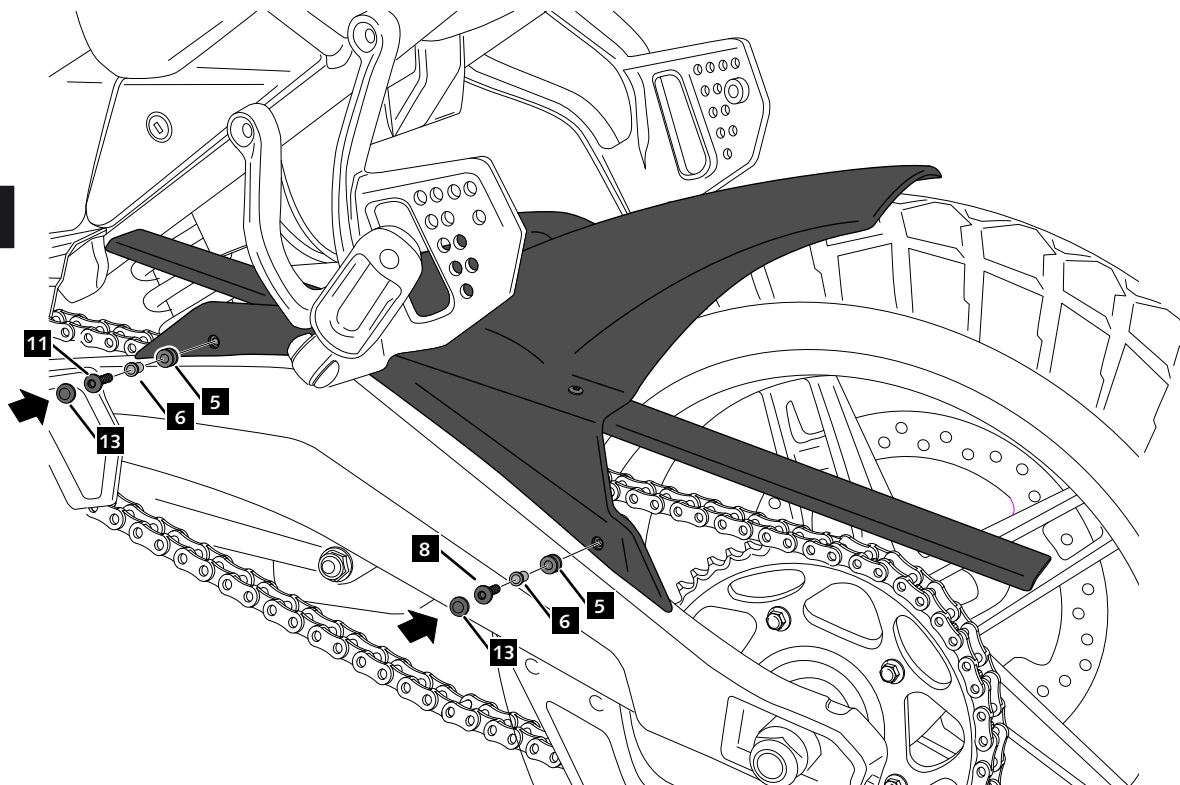

8

ASSEMBLY
MONTAJE

RIGHT SIDE

