

KTM 1390 SUPERDUKE R '24-

M O U N T I N G I N S T R U C T I O N S



REF 21906

WINDSHIELD NG SPORT



TORX
T30

ALLEN
Nº 3
Nº 4

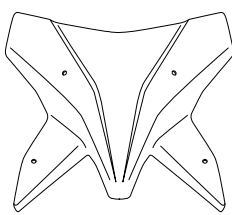ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Sport	Sport screen	1	11009 W/H/F/N/ J/C/TM3
2		Soporte inferior derecho	Right lower support	1	SOPOR2P5IR21906
3		Soporte inferior izquierdo	Left lower support	1	SOPOR2P5IL21906
4		Tornillo Allen M8x45 DIN912	M8x45 DIN912 screw	2	TORNI-AD912-508
5		Casquillo Ø8,5 xØ13 x15	Ø8,5 xØ13 x15 Arrowhead	2	CASQUI-M----614
6		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85
7		Tornillo Allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 Allen screw	4	TORNI-AI----520
8		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	4	AROPASACABLES-3
9		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750


* Algunos componentes se suministran montados.
Some components are supplied assembled.

KTM 1390 SUPERDUKE R '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

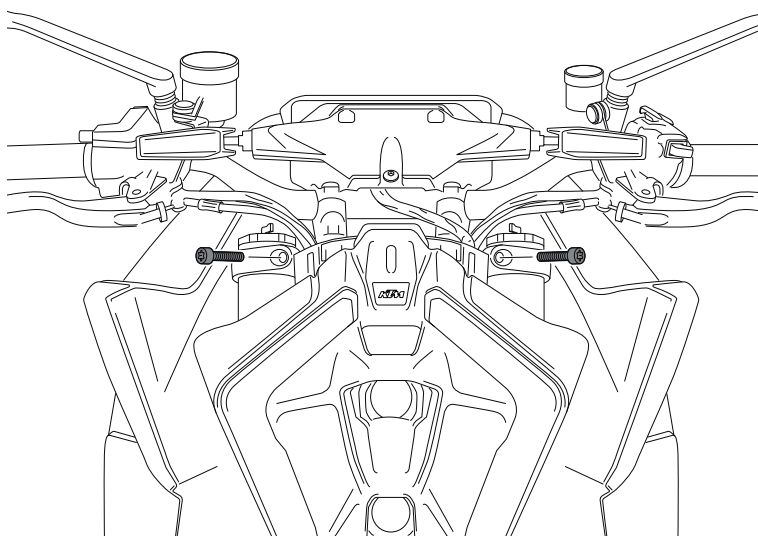

2

ASSEMBLY
MONTAJE

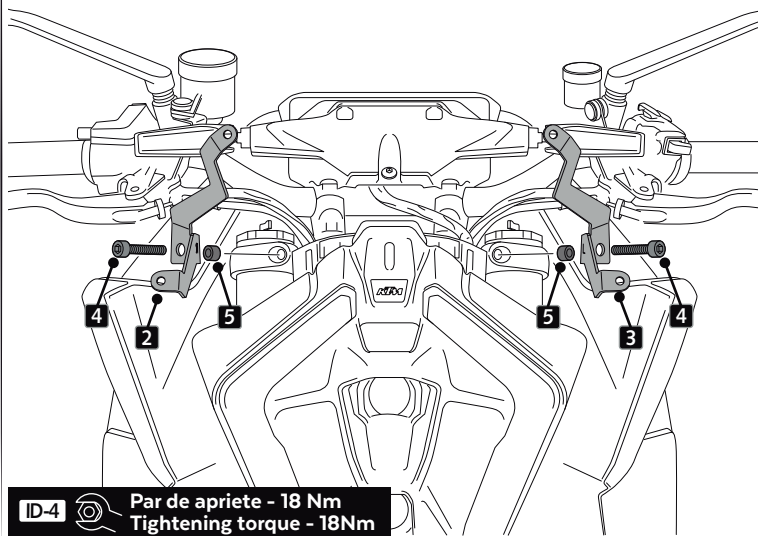

3

ASSEMBLY
MONTAJE

