

BMW R1250R '19-

M O U N T I N G I N S T R U C T I O N S



REF 3623


WINDSHIELD NEW GENERATION SPORT



TORX
T25

ALLEN
Nº 3

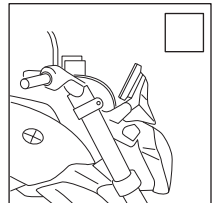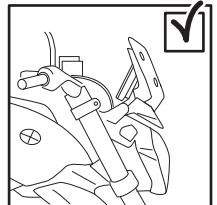

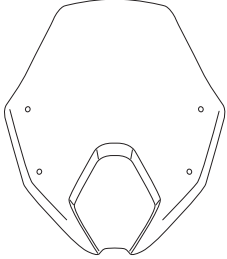
ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula SPORT	SPORT Screen	1	3623F/H/N/WM3
2		Silentblock Ø9 x Ø6 x8mm	Ø9 x Ø6 x8mm silentblock	4	AROPASACABLES-3
3		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
4		Tornillo M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
5		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen cap screw	4	TAPON-----85

BMW R1250R '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DISASSEMBLY
DESMONTAJE

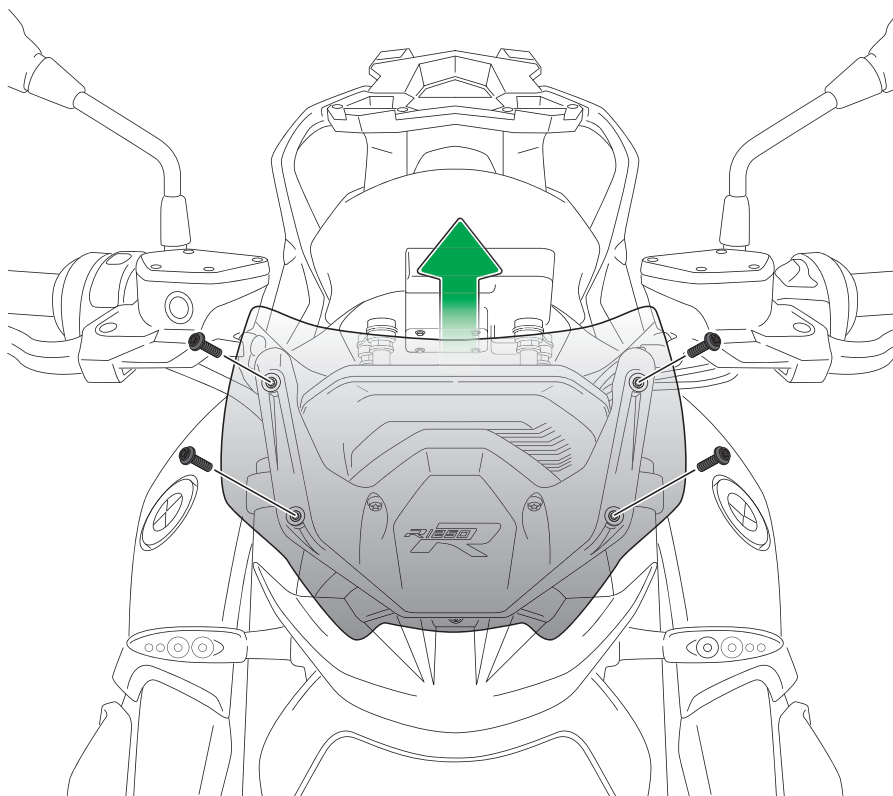

2

ASSEMBLY
MONTAJE

