


SHAD

SUZUKI V-STROM 1000 '14-'19 SUZUKI V-STROM 1050 '20 / 1050 XT '20

SOVS10IF

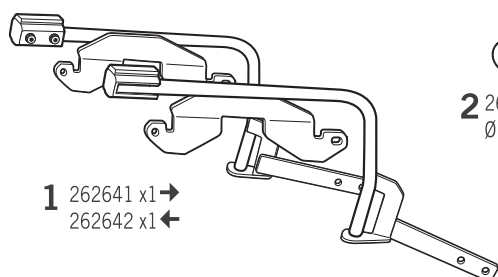

1 262641 x1 →
262642 x1 ←

2 260983 x4
Ø14 Ø9 x 29

3 303017 x12
Ø6

4 304071 x4
M6 x 50 Din 912

5 304057 x4
M6 x 25 Din 912

6 302021 x4
M6

7 260523 x4
Ø16 Ø9 x 25

8 304222 x4
M6 x 85 Din 912

9 260648 x4
Ø16 Ø9 x 5

10 304037 x4
M6 x 35 Din 912

! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.


(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

V-STROM 1000 '14-'19 V-STROM 1050 '20

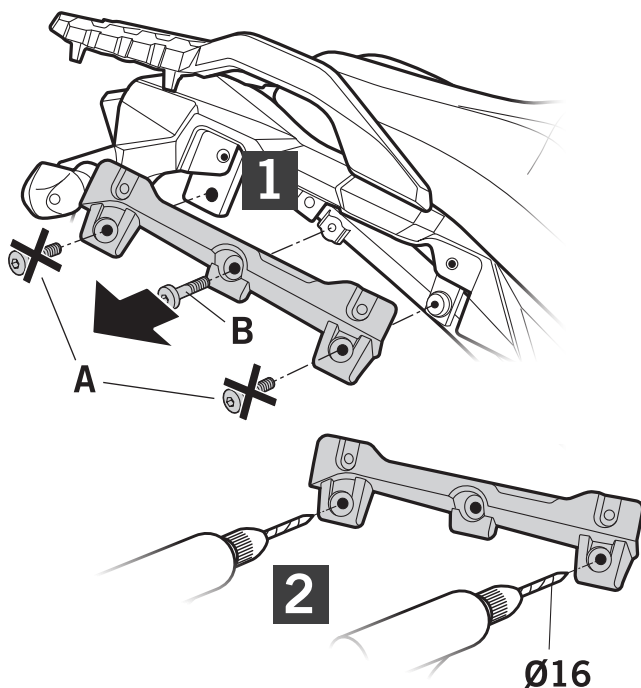

V-STROM 1050 XT '20

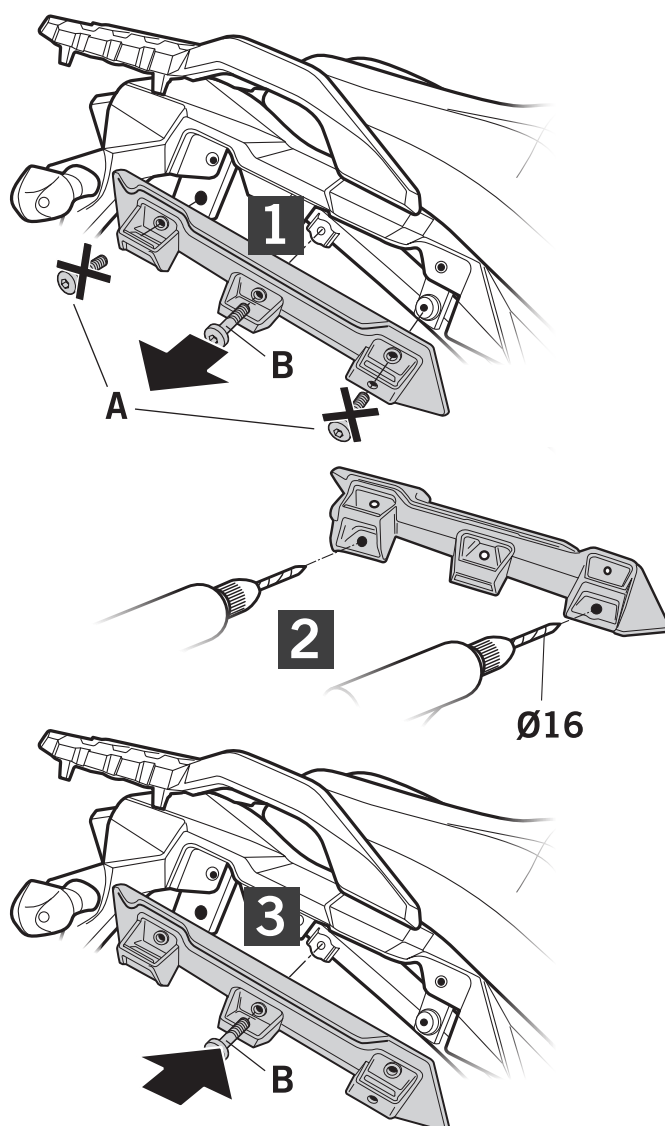

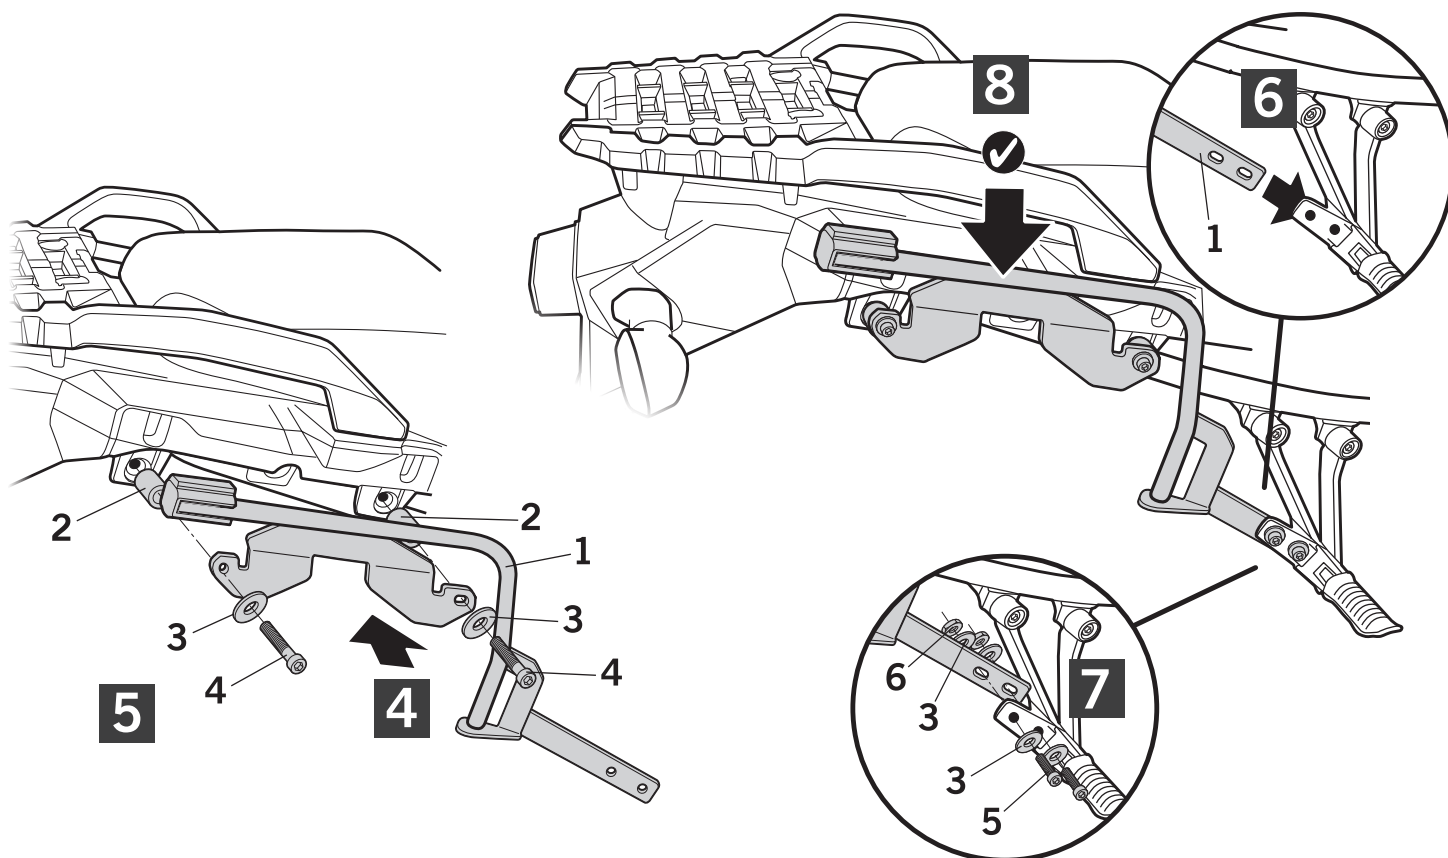

SH23

