


SHAD

HONDA CBF 600 '07

H0CF67IF

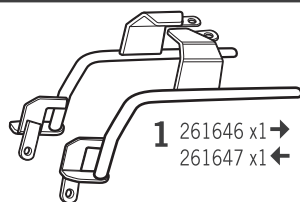

1 261646 x1 →
261647 x1 ←



2 202478 x2



3 261672 x4
Ø18 Ø12 Ø7 x 7,5-2



4 261674 x1 →
261675 x1 ←



5 304079 x4
M6 x 30 Din 7380



6 303000 x8
Ø6



7 260954 x2
Ø14 Ø9 x 16



8 303020 x6
Ø8



9 304173 x2
M8 x 75 Din 7380




10 261680 x2
Ø35 Ø23 x 10 15-4



11 304170 x1
M8 x 60 Din 7380



12 302024 x2
M8



13 261648 x1



14 302021 x2
M6



15 304069 x1
M8 x 55 Din 7380



16 304052 x2
M6 x 20 Din 7380



WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.



(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

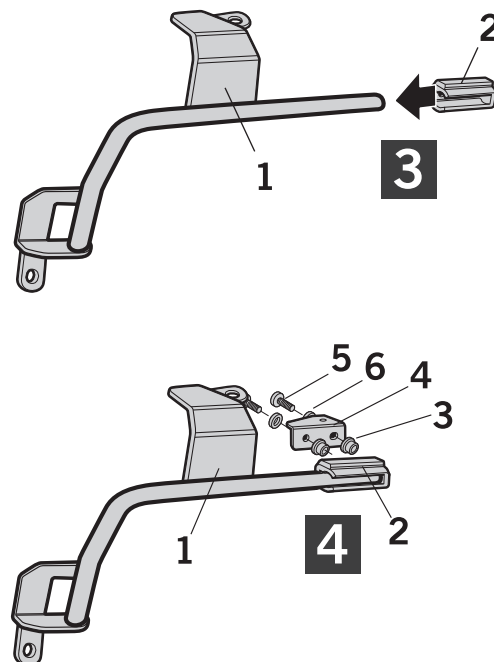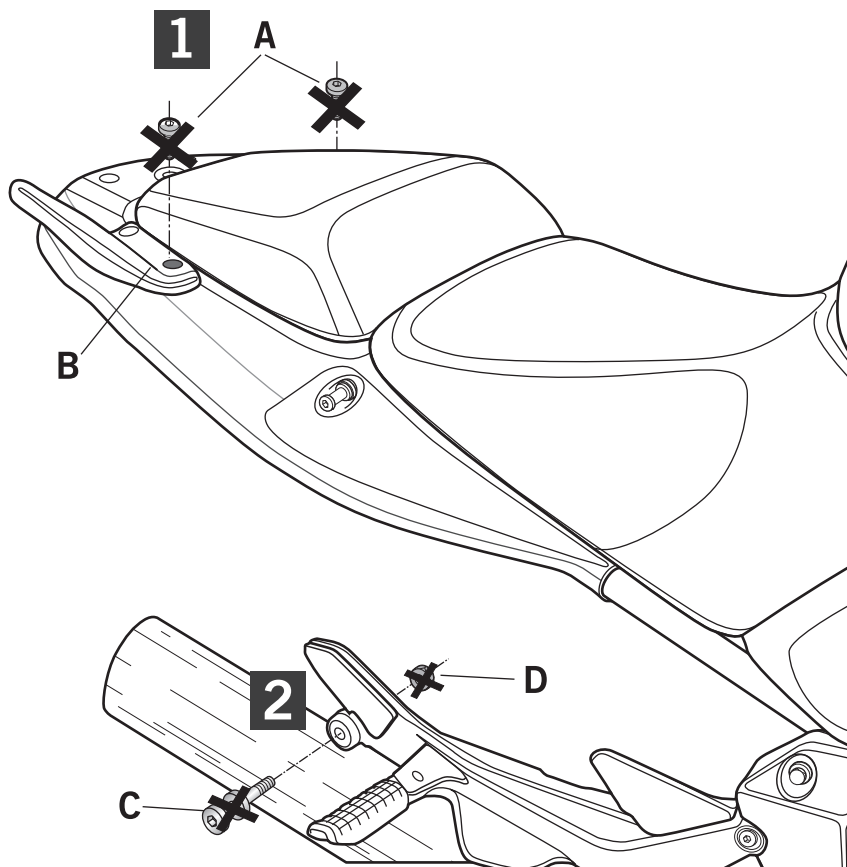

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

