


SHAD

SUZUKI V-STROM 650 '17-'20

SOVS694P

4P
SYSTEM

DESIGNED IN
BARCELONA

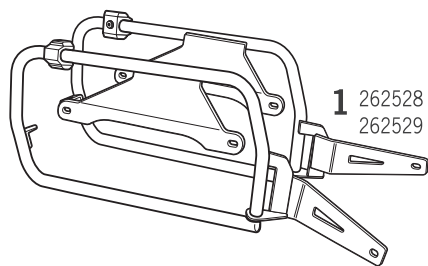

1 262528 x1 →
262529 x1 ←

2 260821 x4
Ø14 Ø9 x 22

3 303017 x8
Ø6

4 303099 x4
Ø6

5 304221 x4
M6 x 45 Din 7380

6 260648 x2
Ø16 Ø9 x 5

7 303027 x4
Ø8

8 262530 x1

9 304052 x2
M6 x 20 Din 7380

10 302021 x2
M6

! WARNING!


GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

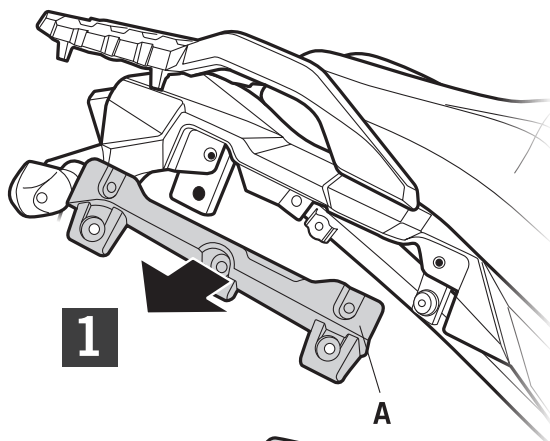


1

A

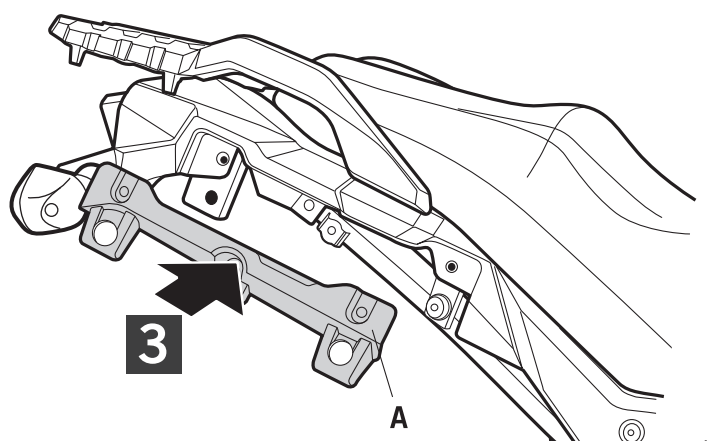


3

A

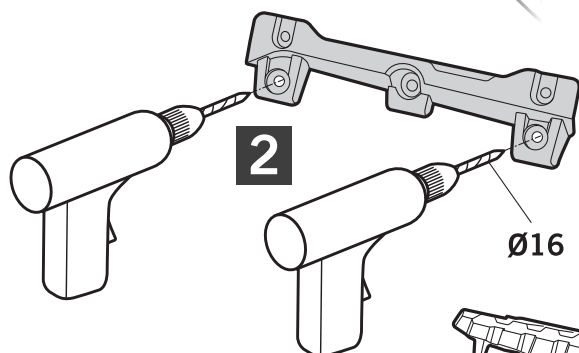

2


Ø16

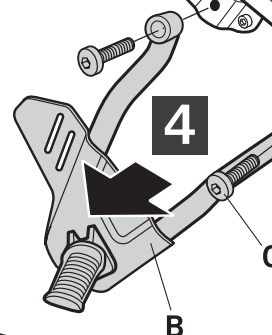

4

B

C

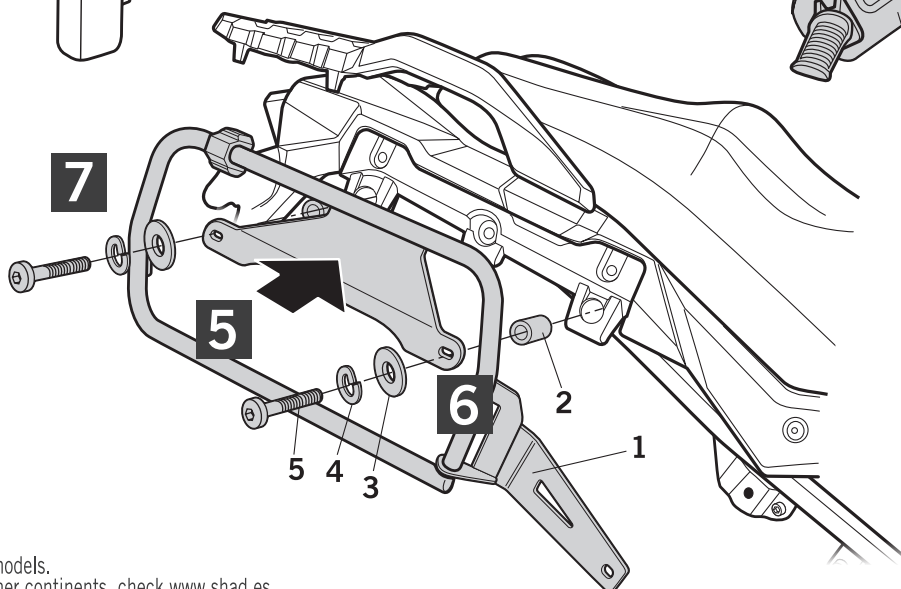

7

5

6

2

1

5

4

3

IMPORTANT: Based on European models.
For compatibility with models in other continents, check www.shad.es

