


# SHAD

## BENELLI LEONCINO 250 '19


KIT TOP BOLN29ST



**1** 262481 x1

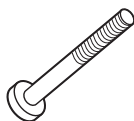


**2** 304172 x2  
M8 x70 DIN 7380



**3** 261265 x2  
Ø16 Ø9 x 53



**4** 303045 x10  
Ø8

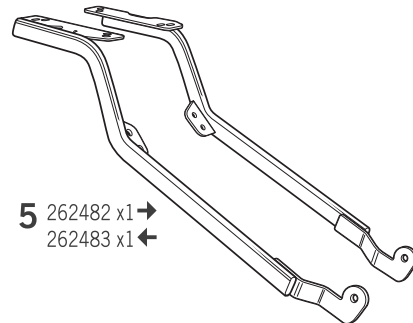

**5** 262482 x1 →  
262483 x1 ←



**6** 304028 x4  
M8 x 25 DIN 7380



**7** 302024 x4  
M8



**8** 260648 x2  
Ø16 Ø9 x 5

### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

