


SHAD

BMW R 1200 RT ('14-18) - R 1250 RT ('19

KIT TOP WORT14ST



1 261709 x1



2 260817 x4
Ø14 Ø9 x 27



3 303017 x4
Ø6



4 304071 x4
M6x50 din 912



5 304061 x2
M6 x 60 DIN 7991



6 261710 x1



7 261851 x1
Ø20 Ø12,5 x 26-3

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)




Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

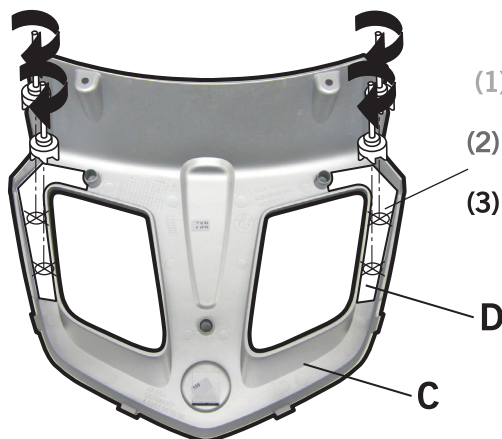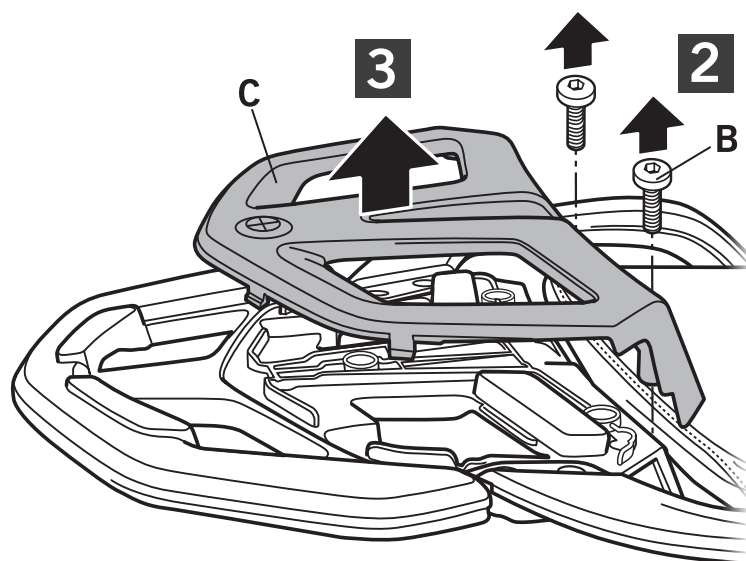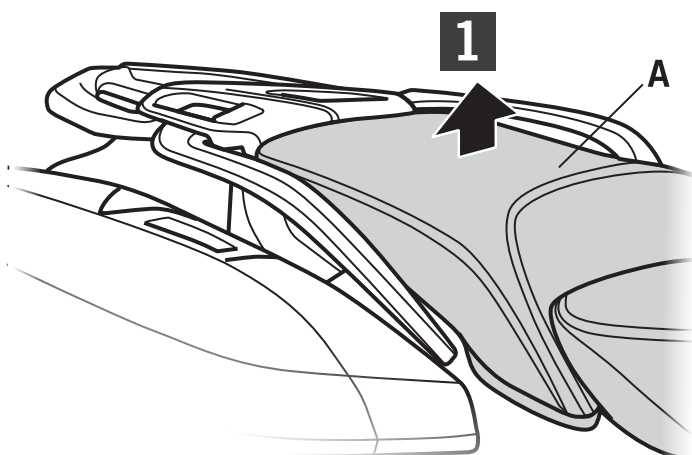

(1) Ø6
↓
(2) Ø10
↓
(3) Ø16

4

