


SHAD

BMW R 1200 R / RS '15

KIT TOP W0RR15ST

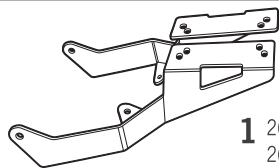

1 261868 x1 →
261869 x1 ←



2 261277 x2
Ø20 Ø11 x 25



3 303045 x4
Ø8



4 304169 x2
M8 x 50 DIN 7380



5 304081 x2
M8 x 20 DIN 7380

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)


Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

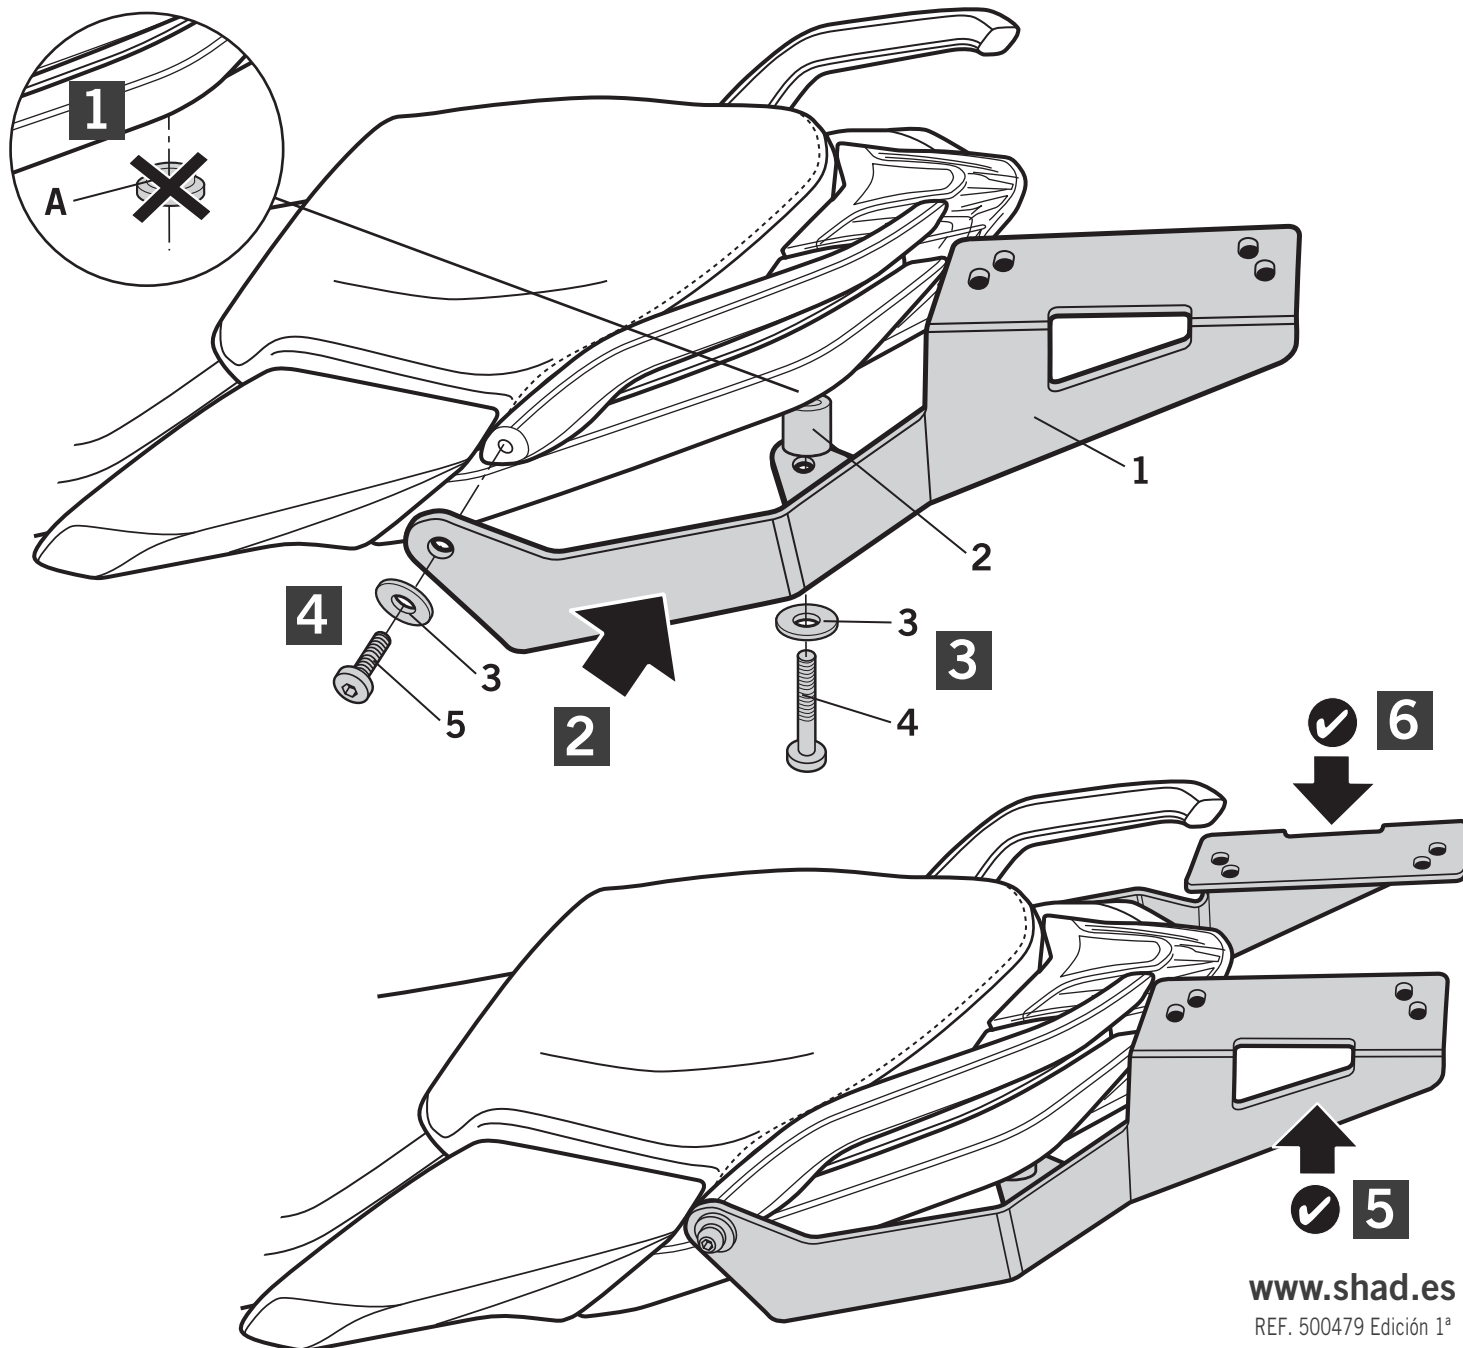

www.shad.es

REF. 500479 Edición 1ª