


SHAD

CFMOTO 700 CL-X '21- C0CL71SR

BCN

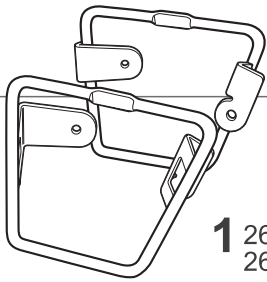

1 263201 x1 →
263202 x1 ←

2 261277 x8
Ø20 Ø11 x25

3 260648 x4
Ø16 Ø9 x5

4 303045 x4
Ø8

5 303027 x4
Ø8

6 304174 x4
M8x80 DIN 7380

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.







(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the café racer after the top master.

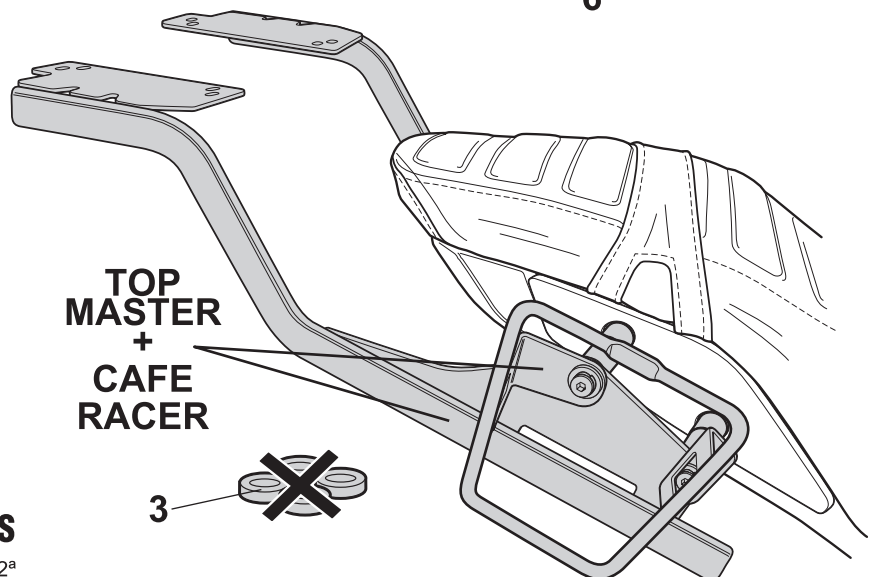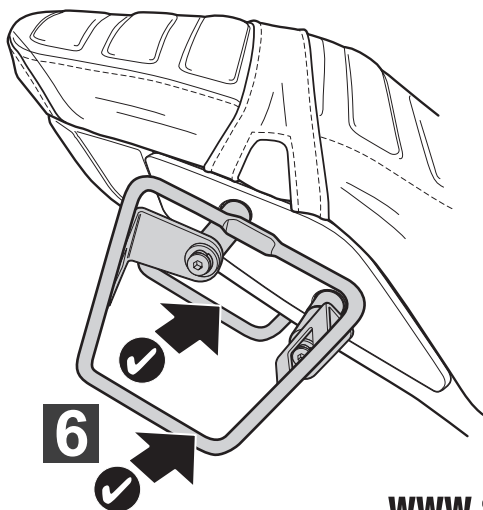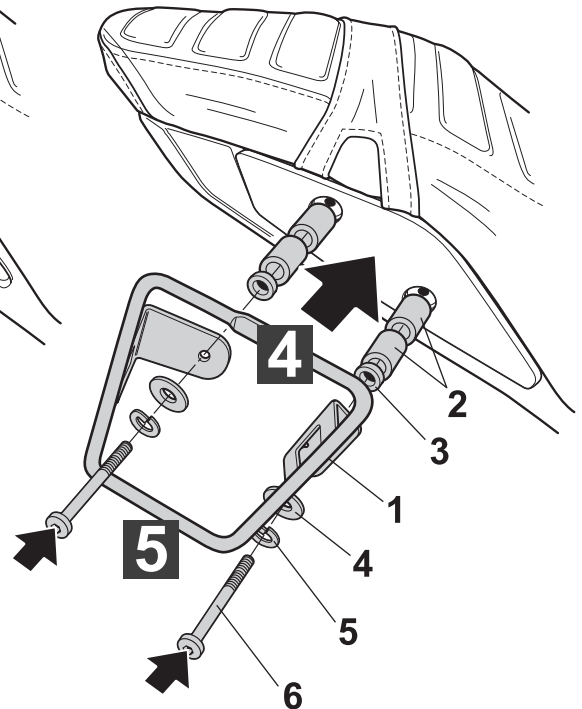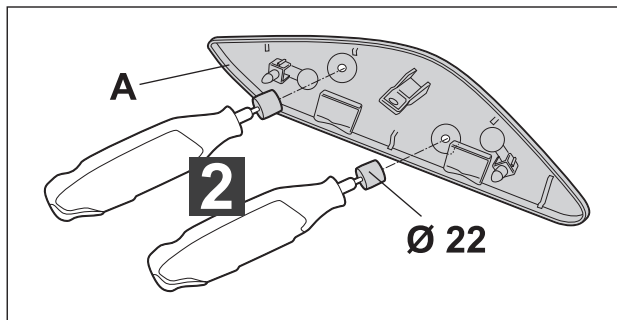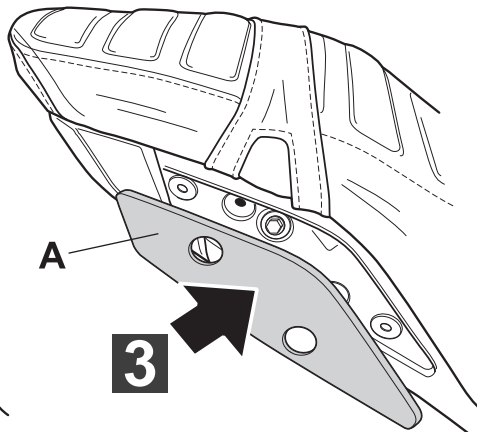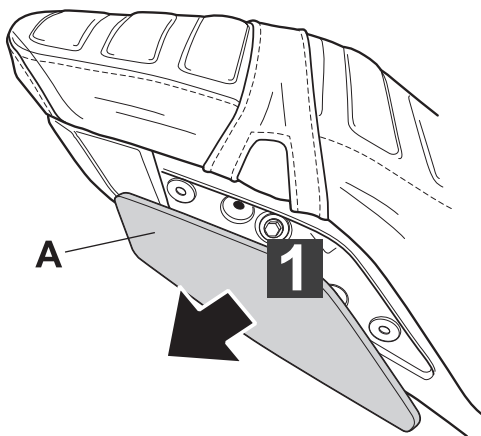

WWW.SHAD.ES

REF. 500479 Edition 2ª

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es