


# SHAD

## BMW R 1250 GS / GS ADVENTURE '19- BMW R 1200 GS / GS ADVENTURE '14-'18 W0GS14IF

**3P**  
SYSTEM

BCN



**1** 262517 x1→  
262518 x1←



**2** 304039 x7  
M8x40 DIN 7380




**3** 303027 x7  
Ø8



**4** 303045 x13  
Ø8




**5** 304028 x6  
M8x25 DIN 7380

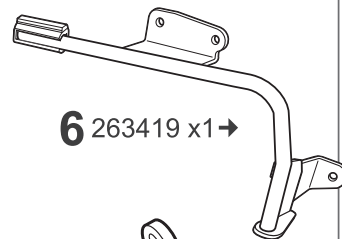

**6** 263419 x1→



**7** 302024 x4  
Ø8

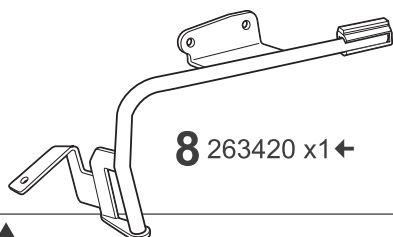

**8** 263420 x1←



**9** 260538 x2  
Ø16 Ø9 x 9



**10** 303020 x2  
Ø8



**11** 260648 x1  
Ø16 Ø9 x 5

### WARNING!


**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.


**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

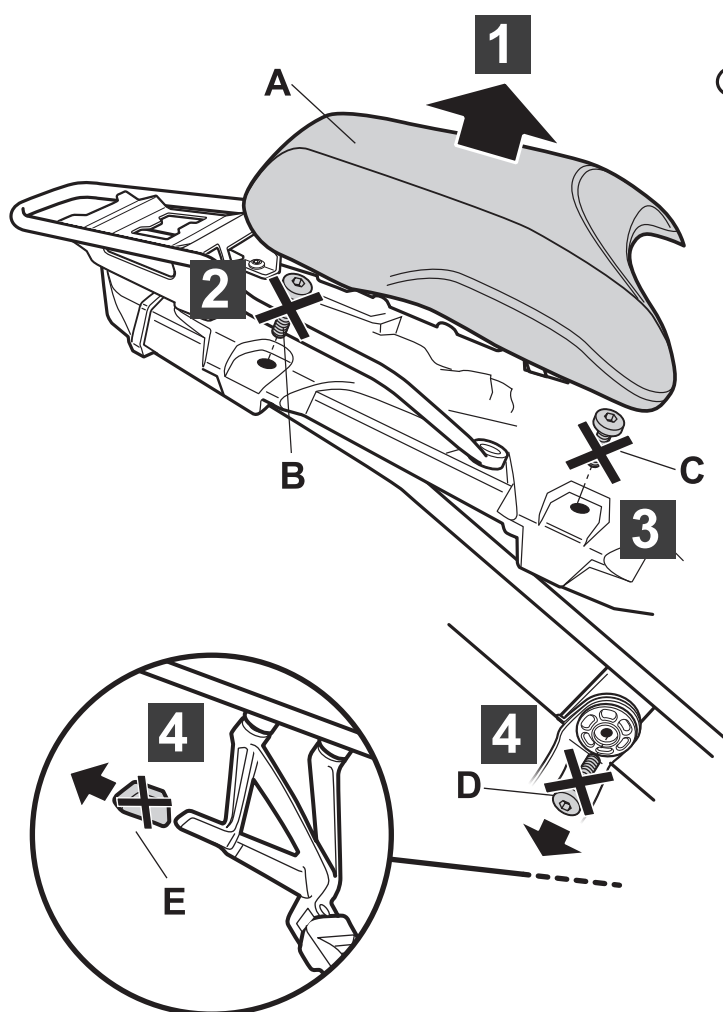

BMW R 1250 GS  
BMW R 1200 GS

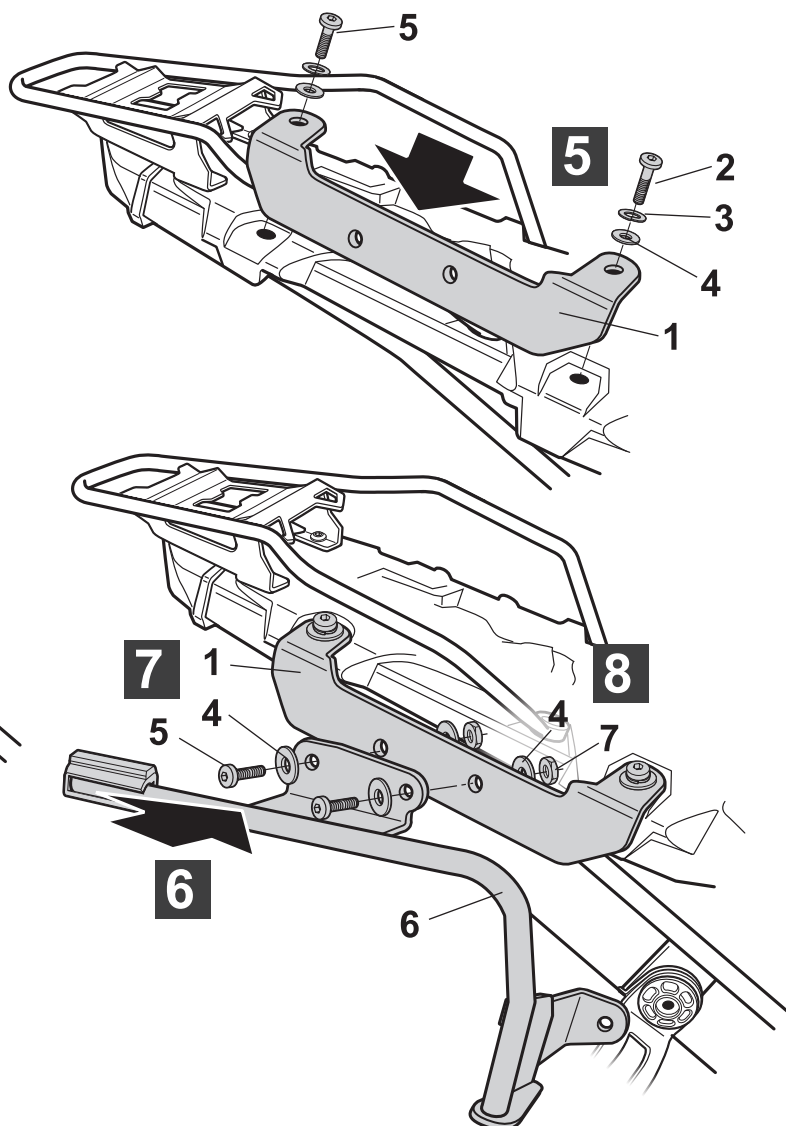

**W0GS14IF**



**BMW R 1250 GS**  
**BMW R 1200 GS**