

# HONDA CB750 HORNET '25-

## M O U N T I N G I N S T R U C T I O N S

REF 22427

NAKED FRONTAL SPOILERS



1 Person



10 min



EASY

ALLEN



Nº 3  
Nº 4




| ID. | PIEZA/PART | DESCRIPCIÓN                       | DESCRIPTION                    | QTY. | REF.:           |
|-----|------------|-----------------------------------|--------------------------------|------|-----------------|
| 1   |            | Alerón Frontal Naked              | Naked Frontal Spoiler          | 1    | 22427J/N/CM3    |
| 2   |            | Soporte                           | Support                        | 1    | SOPOR1P1--22427 |
| 3   |            | Tope de goma Ø10,5 x Ø7,9mm       | Ø10,5 x Ø7,9mm bumper foot     | 4    | TAPON-----95    |
| 4   |            | Arandela de goma Ø4,5 x Ø11 x 2mm | Ø4,5 x Ø11 x 2mm rubber washer | 2    | ARAND-EPDM--722 |
| 5   |            | Tornillo M5x12 DIN7991            | M5x12 DIN7991 allen screw      | 2    | TORNI-D7991-611 |
| 6   |            | Tapón tornillo M5 DIN7991         | M5 DIN7991 screw Cap           | 2    | TAPON-----92    |
| 7   |            | Tornillo Allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 2    | TORNI-I7380-493 |

# HONDA CB750 HORNET '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**


**DISASSEMBLY  
DESMONTAJE**

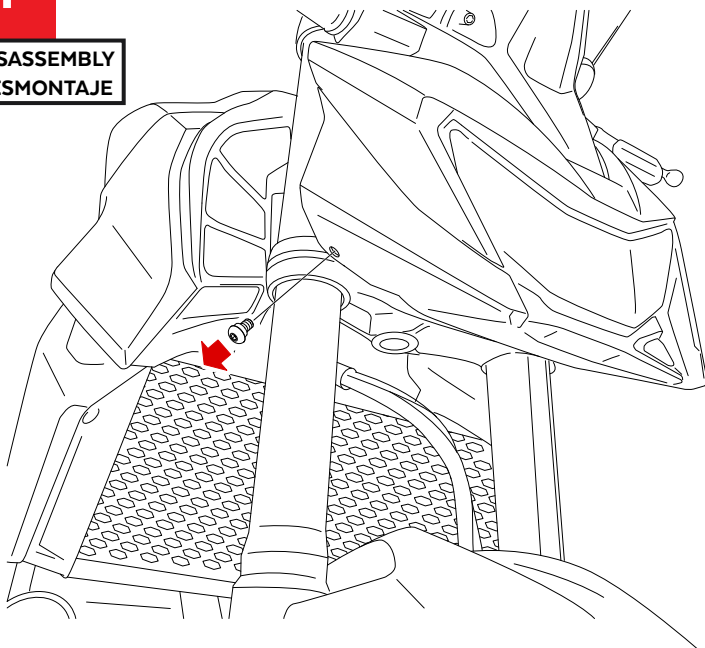

REALIZAR LA MISMA OPERACIÓN PARA EL LADO IZQUIERDO  
PERFORM THE SAME OPERATION FOR THE LEFT SIDE


**2**

**ASSEMBLY  
MONTAJE**

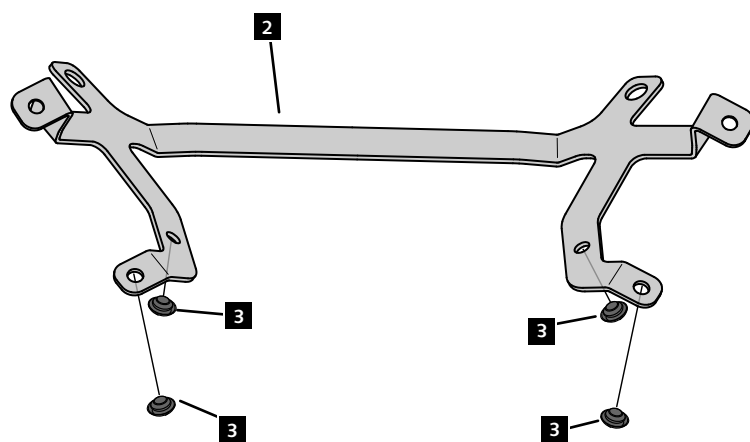

**3**

**ASSEMBLY  
MONTAJE**

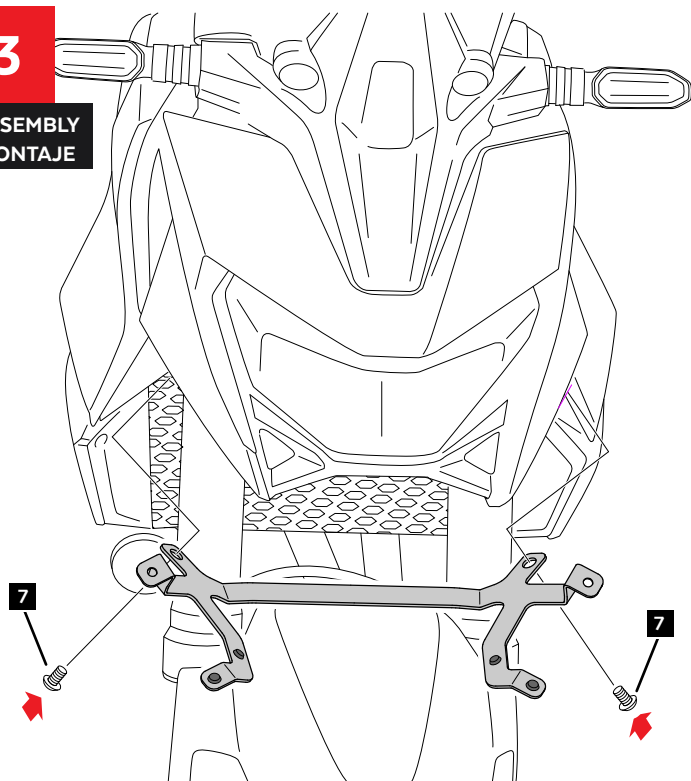

**4**

**ASSEMBLY  
MONTAJE**

