



Do not use
Aluminium spacer
Cod. 205866



Db-killer N°52
Cod.308421801

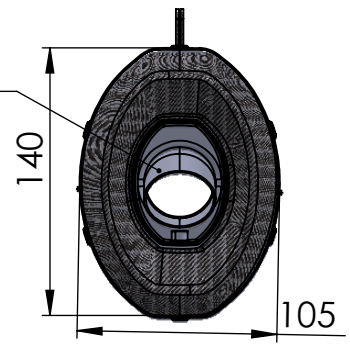

Bracket black S.s
Cod. 3014336501

Knurled collar nut
M6 Cod.200333

**NB.Brand Leovince
on this side**

Knurled collar nut
M8 Cod.200298

ORIGINAL FRAME
Please remove two
original rubber silent-block
located inside

Aluminium spacer
Cod. 205771



Carbon clamp FR2
cod.308448501

2x Aluminium spacer
ø29-ø23.5Xø8,5Xh7
Cod. 205153

E13 92R-01 10395

Aluminium spacer
ø27X8,5
Cod. 204321

Allen screw M8X45
T.C.E.I.Z.B.
Cod.201450

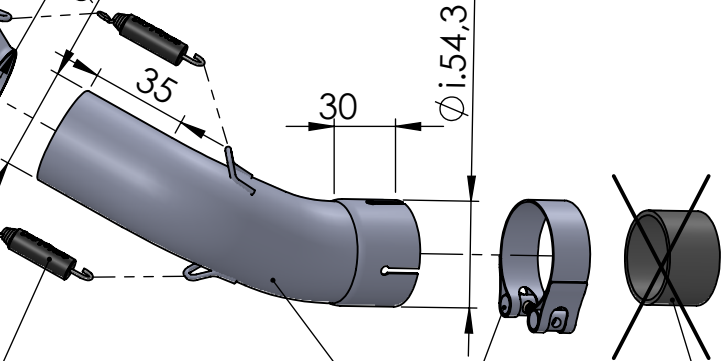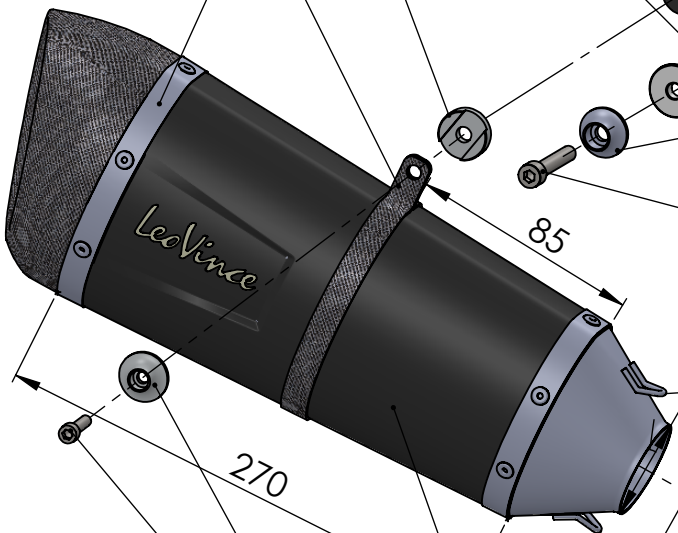

Allen screw M6X25
T.C.E.I.Z.B.
Cod.200586

Aluminium spacer
ø27Xø6.5
Cod. 205767

Pipe N°1310 s.s
cod. 3014336201

2x Short helical
spring tensile
cod. 303949001

**DO NOT
USE ORIGINAL
GRAPHITE
BUSHING**

FACTORY S Stainless s. black
Øi 54X270 RHS
Cod.3014336485

Strap in S.s.Ø57
Cod.300057530

ART. 14336SB

KAWASAKI NINJA 1000 SX / TOURER (fits with original panniers)

SLIP-ON -FACTORY-S - BLACK - APPROVED