
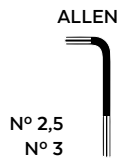


# KTM 1290 SUPERADVENTURE R/S '21 -

## M O U N T I N G I N S T R U C T I O N S

REF 21468

**BEAK EXTENDER**



| ID. | PIEZA/PART | DESCRIPCIÓN                      | DESCRIPTION                   | QTY. | REF.:           |
|-----|------------|----------------------------------|-------------------------------|------|-----------------|
| 1   |            | Pico                             | Beak extender                 | 1    | 21468NM3        |
| 2   |            | Tornillo allen M4x20 Ø9 ISO 7380 | M4x20 Ø9 ISO 7380 allen screw | 2    | TORNI-I7380-890 |
| 3   |            | Arandela de nylon M4             | M4 nylon washer               | 2    | ARNV00000000311 |
| 4   |            | Casquillo Ø5 x Ø9 x 13mm         | Ø5 x Ø9 x 13mm Arrowhead      | 2    | CASQUI-----713  |
| 5   |            | Arandela de goma Ø4,5xØ14x4mm    | Ø4,5xØ14x4mm rubber washer    | 4    | ARAND-GD13D5X4- |
| 6   |            | Tornillo allen M5x20 ISO7380     | M5x20 ISO7380 allen screw     | 2    | TORNIAI7380-387 |
| 7   |            | Arandela de nylon M5             | M5 nylon washer               | 2    | ARNV00000000245 |
| 8   |            | Tope de goma Ø3,7-3,8 x 3,2mm    | Ø3,7-3,8 x 3,2mm bumper foot  | 1    | TOPE--POF-40022 |


# KTM 1290 SUPERADVENTURE R/S '21 -

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**

DISASSEMBLY  
DESMONTAJE



## MOTORBIKE WITHOUT RADAR

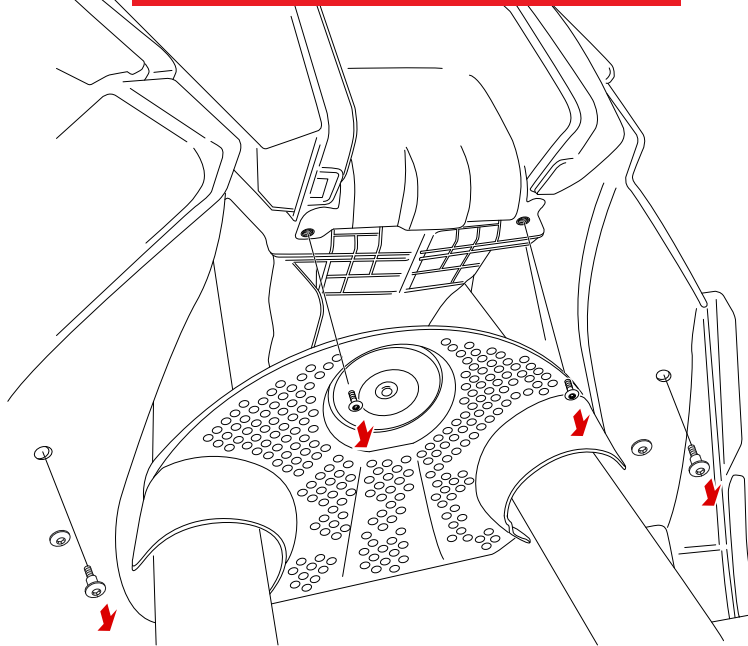

**2**

ASSEMBLY  
MONTAJE

## MOTORBIKE WITHOUT RADAR

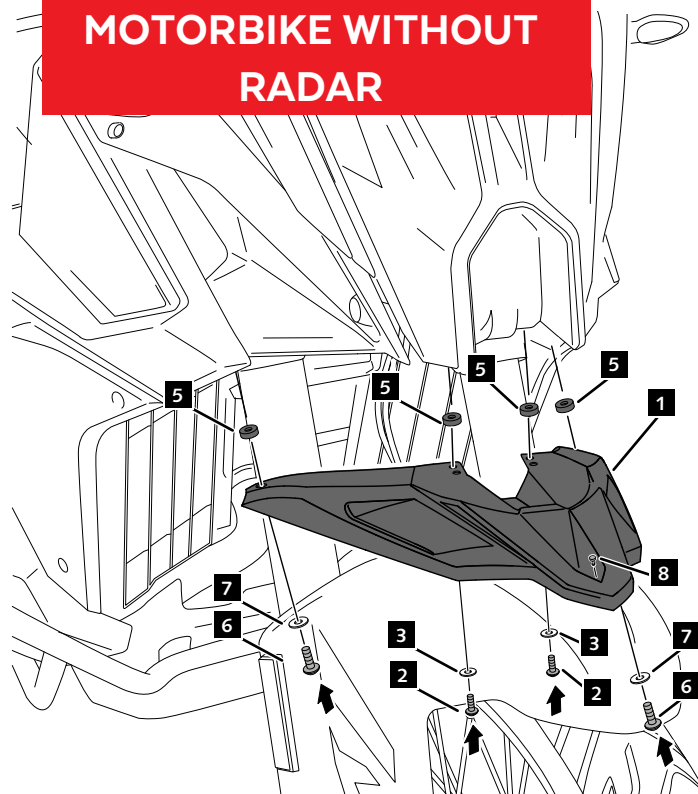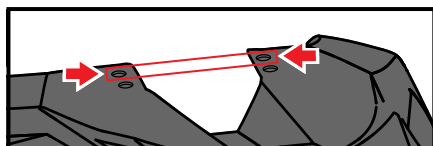


# KTM 1290 SUPERADVENTURE R/S '21 -

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**

DISASSEMBLY  
DESMONTAJE

## MOTORBIKE WITH RADAR

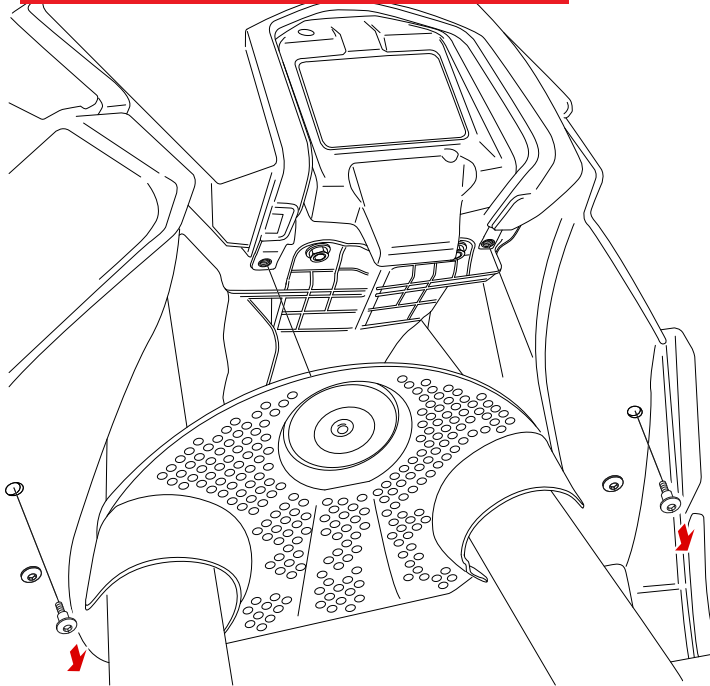

**2**

ASSEMBLY  
MONTAJE

## MOTORBIKE WITH RADAR

