


SHAD

PEUGEOT CITYSTAR 125-200 '12-16 KIT TOP POCT16ST

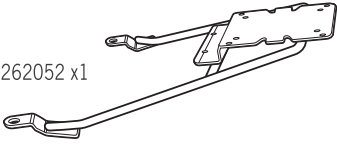

1 262052 x1



2 260538 x2
Ø16 Ø9 x 9



3 303017 x2
Ø6



4 304038 x2
M6 x 22 Din 912



5 304032 x2
M8 x 50 Din 7991



6 400253
x 0,2 m



! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

