


SHAD

YAMAHA NIKEN 900 '18

YONK98IF

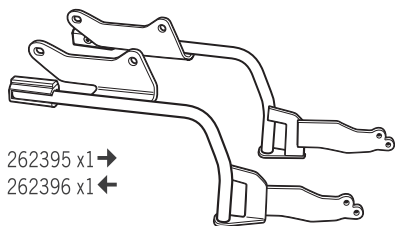

1 262395 x1 →
262396 x1 ←



2 260538 x4
Ø16 Ø9 x 9



3 303045 x4
Ø8



4 304174 x4
M8 x 80
DIN 7380



5 303017 x4
Ø6



6 304012 x4
M6 x 16
DIN 912

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.




(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the top master before the 3P System.

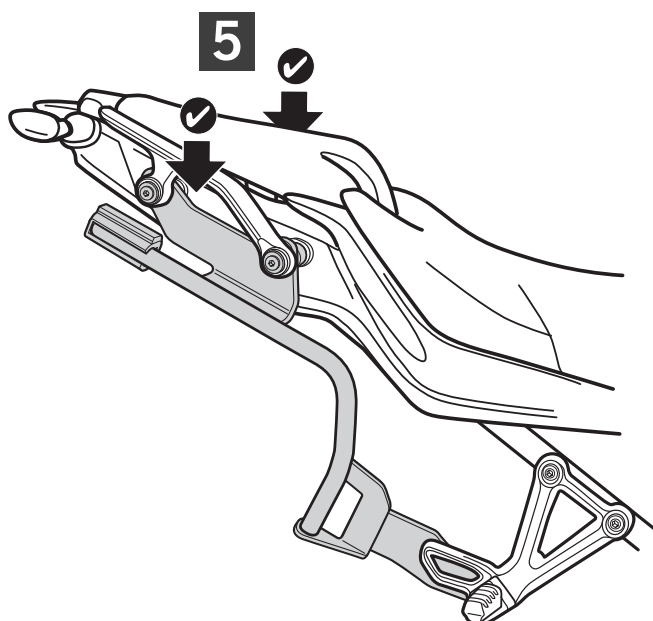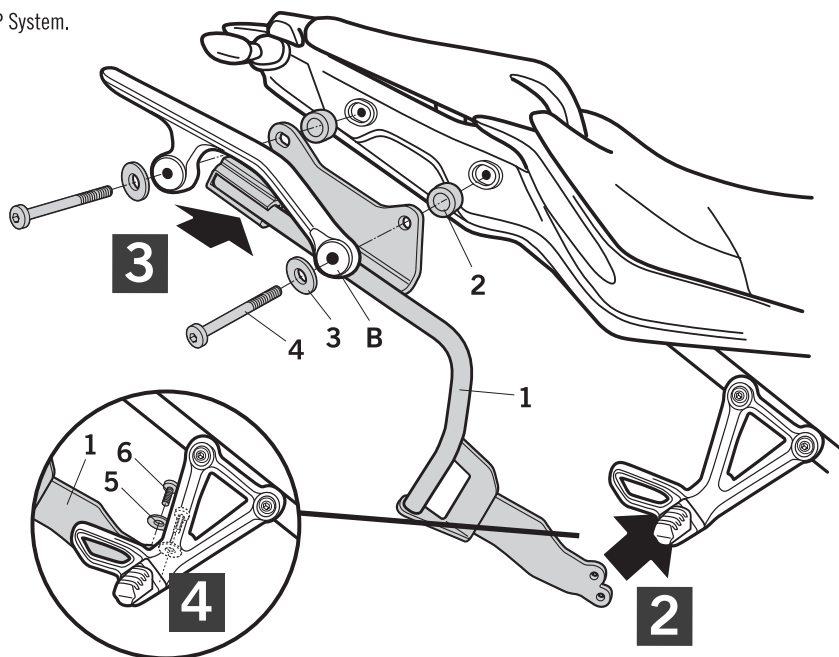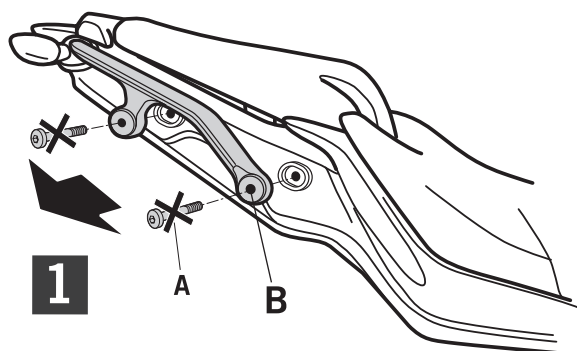

TOP MASTER
+
3P SYSTEM



IMPORTANT: Based on European models.
For compatibility with models in other continents, check www.shad.es

www.shad.es REF. 500479 Edición 2ª